

SOFTWARE

OT Drive PC User Manual

Ref.: SCT TMO OT SPEC 0037 Rev.: B 16/04/2004

CHANGE HISTORY

Rev.	Date	Author	Reason for change
A	12/03/2004	Sagem SA	First reference in a the new documentation repository
B	07/07/2004	Sagem SA	<p>Improvement in trace recording/replaying management</p> <p>Added in Layer1 report :</p> <ul style="list-style-type: none"> - Serving and neighbour cell ID in Idle mode - Serving cell BCCH in dedicated mode <p>New window for User Embedded Parameter management</p> <p>Vocal marker management</p> <p>Removal of automatic connection to trace port</p> <p>New mmi for Layer message forcing management</p> <p>New mmi for Layer message decoder</p>

TABLE OF CONTENTS

1.	SCOPE	6
1.1	Introduction	6
1.2	Reference.....	6
2.	SETUP.....	8
2.1	Hardware requirements.....	8
2.2	Setup program.....	8
	GLOBAL MENUS PRESENTATION.....	9
1.	FILE	10
1.1	Connect / Disconnect.....	10
1.2	Replay	13
1.3	Activate/Deactivate recording.....	15
1.4	EXPORT TO.....	16
1.5	Import from mobile.....	18
1.6	Import from IRDA File.....	18

1.7	Serial ports settings	19
1.8	Exit	19
2.	TOOLS	20
2.1	AT commands:	20
2.2	Log	22
3.	TRACE	24
3.1	GSM.....	25
3.1.1	LAYER 1 Information.....	26
3.1.2	MM Information	27
3.1.3	RR Information	28
3.1.4	GSM QoS Information	29
3.1.5	C/I (only available since protocol version 3.9)	31
3.1.6	Service State Information.....	32
3.2	Layer Messages.....	33
3.2.1	Message Column.....	34
3.2.2	Dir Column	35
3.2.3	Type of message Column	35
3.2.4	Data Column	35
3.2.5	Time Stamp Column	35
3.2.6	BCCH Column.....	35
3.2.7	Toolbar description	35
3.2.8	RLC/MAC blocks header	37
3.3	GPRS (Only available with OT having GPRS Capability).....	38
3.3.1	RLC/MAC Information (Only available with OT having GPRS Capability)	39
3.3.2	LLC Information (Only available with OT having GPRS Capability).....	41
3.3.3	GMM Information (Only available with OT having GPRS Capability).....	42
3.3.4	SM/SNDCP Information (Only available with OT having GPRS Capability).....	43
3.3.5	GPRS Data transfer information (Only available with OT having GPRS Capability)	45
3.4	Trace configuration	47
3.4.1	Refresh	47
3.4.2	Default configuration.....	48
3.4.2.1	Save Configuration	48
3.4.2.2	Reset (no trace activated).....	48
4.	FORCING	49
4.1	General forcing.....	49
4.2	Layer 3 Modification.....	51
4.3	Loaction update.....	52
5.	SCANNING.....	53
5.1.1	RF Scanning	53
5.1.2	BCCH Scanning	55
6.	INFORMATION AND SETTINGS.....	58

6.1	Mobile information	58
6.2	Serial link setup.....	59
7.	WINDOW	60
8.	“?” MENU	61
8.1	Help.....	61
8.2	About.....	61

1. SCOPE

1.1 INTRODUCTION

This document describes the PC trace software used to drive the SAGEM OT Mobiles.

1.2 REFERENCE

- [03.64]: Digital cellular telecommunications system (Phase 2+) ; General Packet Radio Service (GPRS) ; Overall Description of the GPRS radio interface ; Stage 2 (Release 1997)
- [04.04]: Digital cellular telecommunications system (Phase 2+) ; Layer 1 ; General requirements (Release 1997)
- [04.07]: Digital cellular telecommunications system (Phase 2+) ; Mobile radio interface signalling layer 3 ; General aspects(Release 1997)
- [04.08]: Digital cellular telecommunications system (Phase 2+) ; Mobile radio interface layer 3 specification (Release 1997)
- [04.60]: Digital cellular telecommunications system (Phase 2+) ; General Packet Radio Service (GPRS) ; Mobile Station (MS) - Base Station System (BSS) interface ; Radio Link Control/ Medium Access Control (RLC\MAC) protocol (Release 1997)
- [04.64]: Digital cellular telecommunications system (Phase 2+) ; General Packet Radio Service (GPRS) ; Mobile Station (MS) - Serving GPRS Support Node (SGSN) - Logical Link Control (LLC) layer specification (Release 1997)
- [04.65]: Digital cellular telecommunications system (Phase 2+); General Packet Radio Service (GPRS); Subnetwork Dependent Convergence Protocol (SNDCP).
- [04.65]: Digital cellular telecommunications system (Phase 2+); Radio transmission and reception (Release 1997)
- [04.64]: Digital cellular telecommunications system (Phase 2+); General Packet Radio Service (GPRS); Mobile Station (MS) supporting GPRS (Release 1997)
- [04.65]: ITU-T Recommendation V.250 (ex V.25ter): "Serial asynchronous automatic dialling and control".

2. SETUP

2.1 HARDWARE REQUIREMENTS

The hardware requirements for this software is:

- Pentium III, 550 MHz, 128 Mo RAM
- Screen 1024x768
- Windows 2000, NT 4.0 or XP Operating system

2.2 SETUP PROGRAM

The program is installed with a setup program. The setup program is delivered over the OT CD-ROM. To Install the **OT DRIVE PC** software, click on Setup.exe and follow instructions. The default installation's directory is: **CVProgram Files\OT DRIVE PC**.

Global menu presentation

Main menus are divided in several groups:


The **File** menu enables the user to define the working mode (connected, disconnected or replay), to set the serial link settings, to save data received from the mobile and to exit the application.

The **Function** menu enables the user to define forcing parameters, to launch radio frequency scanning and to send AT command to the mobile.

The **Trace** menu enables user to activate or deactivate trace messages and their associated trace window.

The **Window** menu enables the user to find, organise or list trace window.

The **?** menu enables the user to access the software version number, to view mobile capabilities and to find support with the user manual documentation.

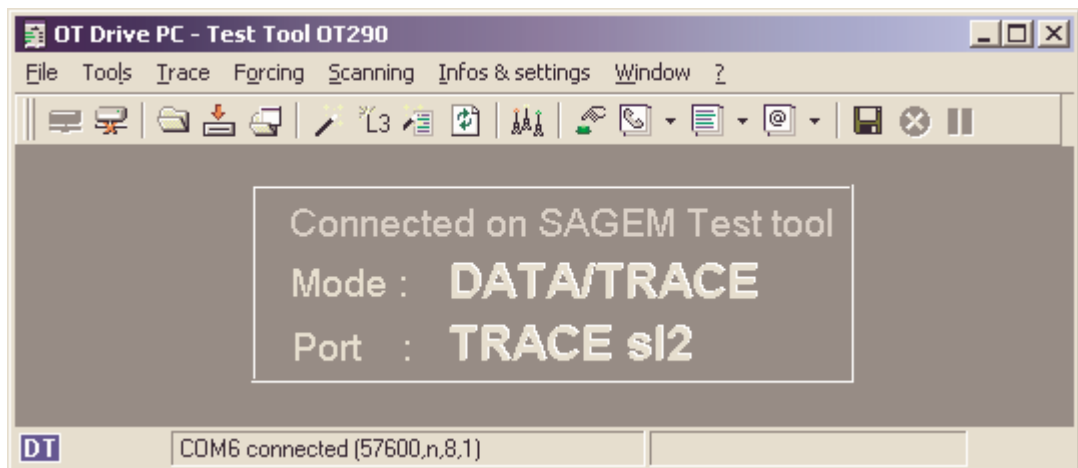

The toolbar allows users to access faster to the main OT Drive functionalities. When the mouse pointer stays over a button, a tool tip text will give an explanation on the function that is activated by clicking.


The status bar shows many information :

- Software mode connection or disconnection,
- Recording activated
- Service state (when connected).

The connected mobile product name is printed on the window title bar.

1. FILE

Sub menus are displayed below:

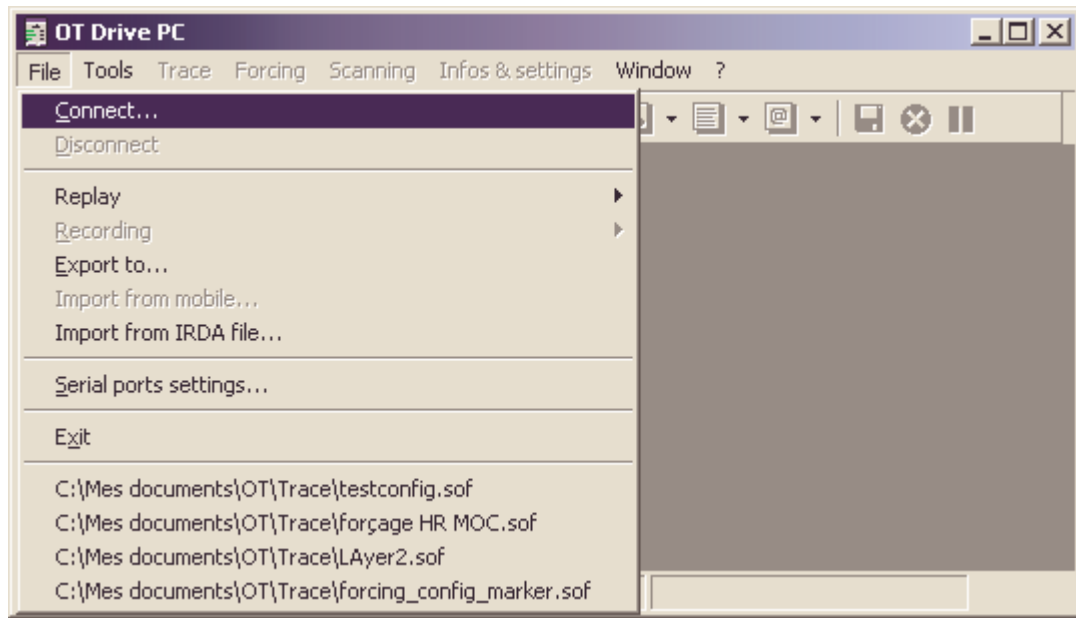


1.1 CONNECT / DISCONNECT

These menus are used, respectively, to open or close the COM port.

1) Connection by port settings


User choose the entire port configuration

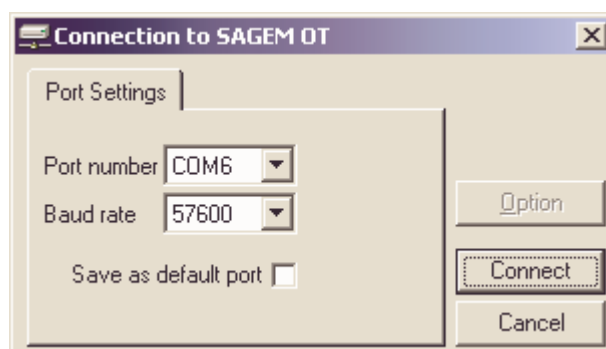


PC software search first a Trace port linked to this port COM and then search a DATA port.

if OT Drive PC is configured in automatically connect mode, when the user choose connect menu, no window is displayed. The software tries to connect to the OT with the default serial link parameters (see chapter 4.4 "Serial ports settings" to set or update the connection mode). It is possible to save current parameters as default parameters. The command button "option" open the "serial ports setting" window.


If no mobile is found, the following warning message is displayed:

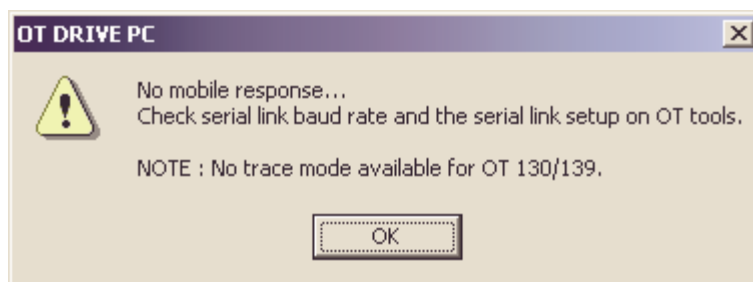

If the COM port is already used, the following warning message is displayed:

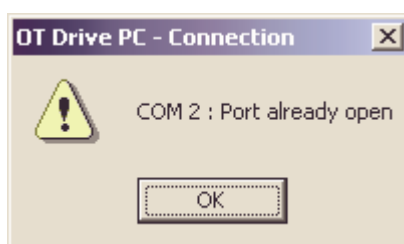

During the run, the COM port number and its parameters are displayed into the status bar:

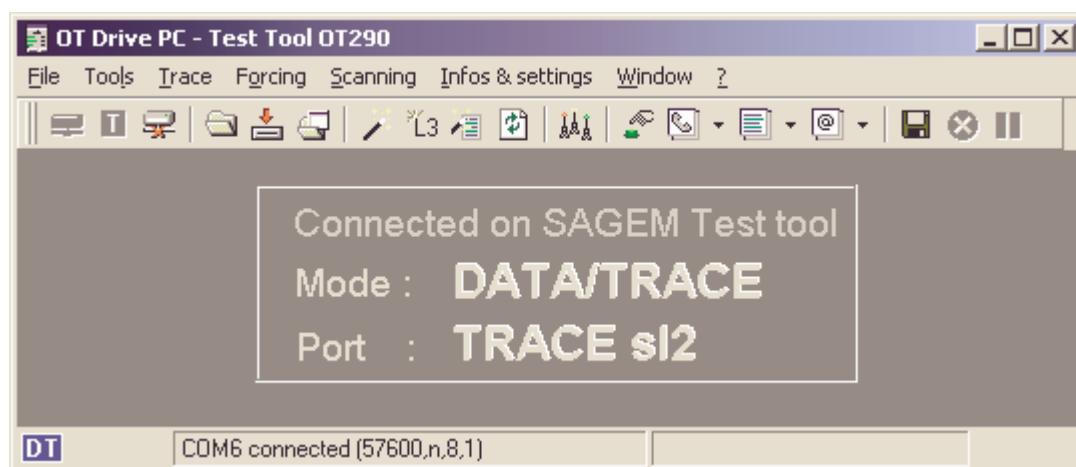

NB : When connected in TRACE mode, a message is sent to the mobile to retrieve its product name.

According to the product capabilities, some software functions could be disabled.

Note: the summary board, here after, resume possible serial link configuration :

Link	Serial link1 (or data cable)	Serial link 2 (only for OT190/199/290 and 96)
Speed	Speed: user defined from 1200 to 115200 and Automatic 115200 recommended	Speed 57600
Flow-control	Uplink hardware flow control	No Flow control

Serial link set-up	Data/trace	Data	Trace
	Data	Data	-
	Trace	Trace	-

1.2 REPLAY

This menu enables to replay recorded data.


An "open file" dialog box is opened when the user clicks on the **replay** menu in the main "file" menu or on the "open folder" button in the toolbar.

Select the appropriate ".bin" file and clicks on **Open button**. If the file was recorded with an old file format, you will be warned of its conversion.

Now you can start the replay scenario by clicking on **Play** button in toolbar.

During the run, you can choose pause mode, by clicking on **Pause** button, to suspend the scenario. It works like a simple CD player recorder.

A Text box with a spin button allows user to set up the reading speed from normal to 1000x, and the slider can be moved directly to the desired record. As well the text box (record number) can be used to reach a record identified by its number.

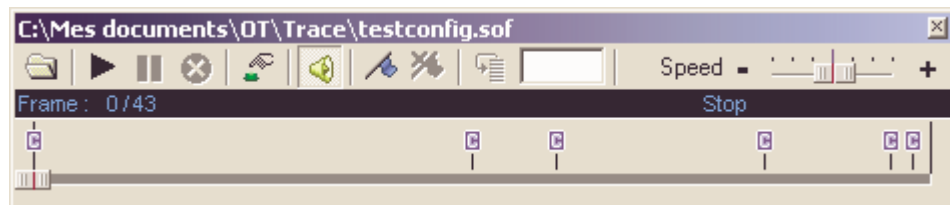


Information on the mobile use to record the current replay file is accessible in the menu **infos & settings**, submenu **mobile information**

The window below shows :


Activated trace during the record (checkbox is disabled if trace is never activated during the record)

Current Activated trace

Allowed trace window (if the checkbox is unchecked the concerned trace is not replayed and the associated window is closed)

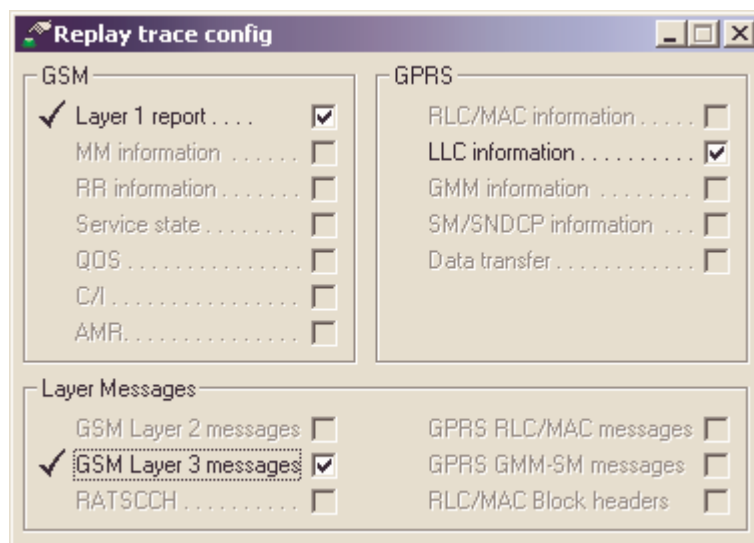

The textbox shown as below is displayed when the connect button from the toolbar or the connect menu is clicked :

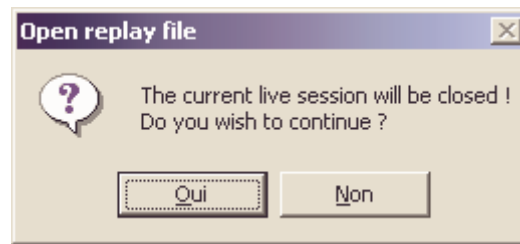


1.3 ACTIVATE/DEACTIVATE RECORDING


This menu enables to activate or deactivate the recording of the data received from the mobile.

- To start the recording, choose **Recording** in the function menu, then choose **Activate....** This function is also accessible by the button located in toolbar.

Note : , You must selected old format file if you want to record in the old format.

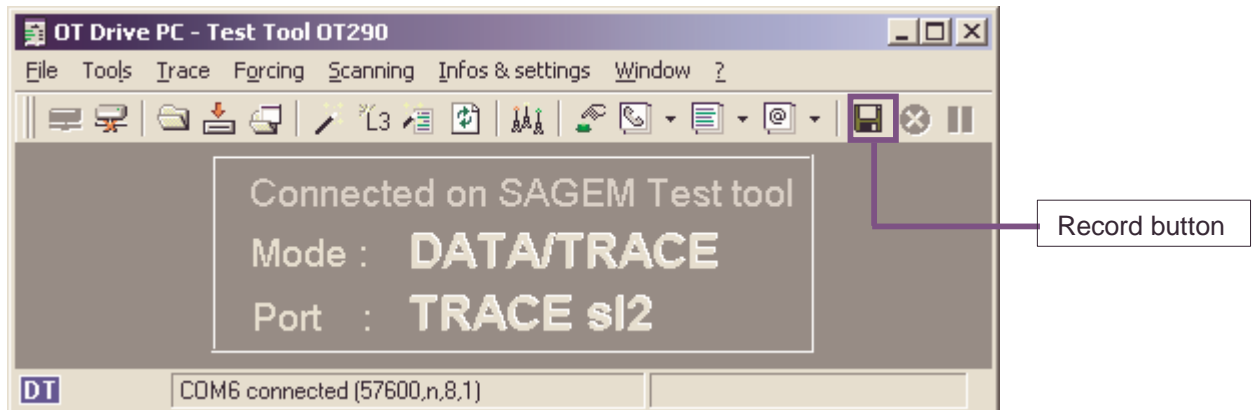


- To stop the recording choose **Deactivate** in the **Recording** menu or the **stop button** in replay control panel.

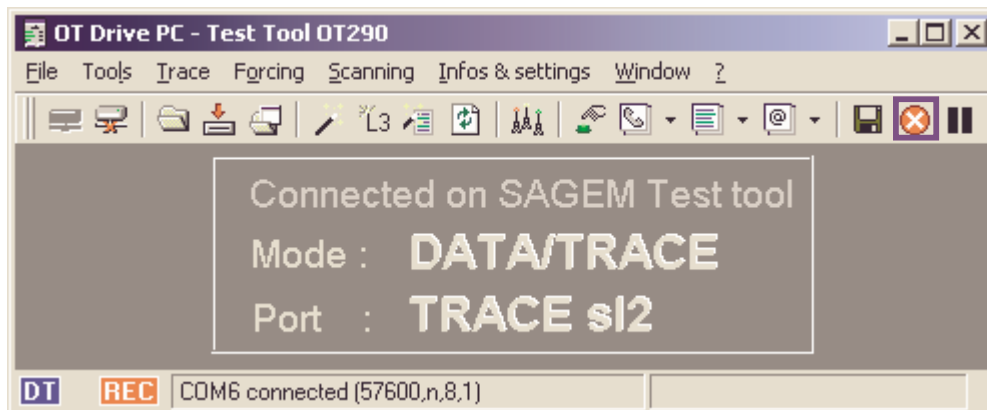

1.4 EXPORT TO...

This menu enables to export recorded data into several files in .csv format, with full decoded frames.

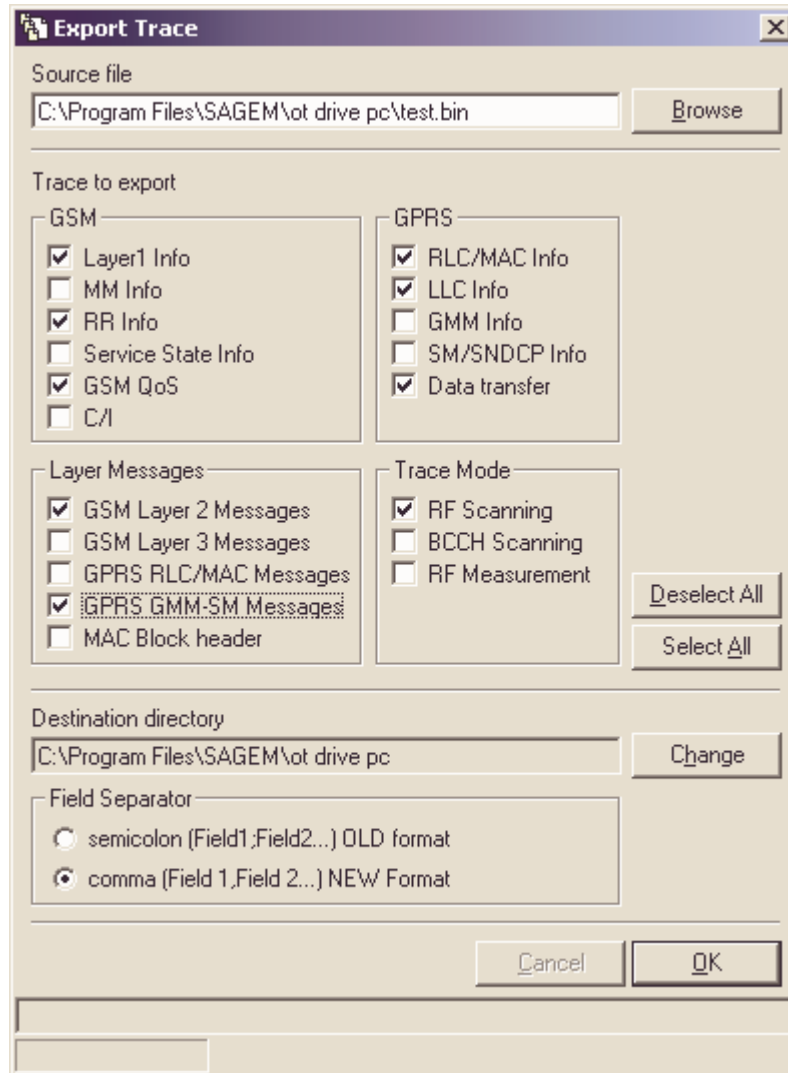

Click on **browse** button, to choose the trace file to export in CSV file format.

Use checkbox to select traces to export.

Choose the destination directory.

If the file was recorded with an old file format, you will be warned that the file is converted.

Files generated will be named as :

“Replay File Name” + “Selected Trace” + “.csv”

“Selected Trace” can be :

Selected Trace	Data	Generation
Infos	Mobile and file informations	Always
All	All traces, up and down	Always
Layer1 Idle	Layer1 Idle	User select
Layer1 Dedicated	Layer1 Dedicated	User select
InterLayer	InterLayer	User select
QOS GSM	QOS GSM	User select
QOS GPRS	QOS GPRS	User select
RLC-MAC	RLC-MAC	User select
Service State	Service State	User select
LLC	LLC	User select
GMM	GMM	User select
SM-SNDCP	SM-SNDCP	User select
MM	MM	User select
RR Idle	RR Idle	User select
RR Dedicated	RR Dedicated	User select
RR Hopping	RR Hopping	User select
Rf Measure	Rf Measurement	User select
Rf Scan GSM-P	Rf Scanning GSM-P	User select
Rf Scan GSM-E	Rf Scanning GSM-E	User select
Rf Scan GSM-R	Rf Scanning GSM-R	User select
Rf Scan DCS(1)	Rf Scanning DCS(1)	User select
Rf Scan DCS(2)	Rf Scanning DCS(2)	User select
Rf Scan PCS(1)	Rf Scanning PCS(1)	User select
Rf Scan PCS(2)	Rf Scanning PCS(2)	User select
Bcch Scan GSM-E	Bcch Scanning GSM-E	User select
Bcch Scan GSM-R	Bcch Scanning GSM-R	User select
Bcch Scan GSM-P	Bcch Scanning GSM-P	User select
Bcch Scan DCS	Bcch Scanning DCS	User select

Once opened, file infos are displayed in the “Infos” file. If some question mark are displayed, it means that this file is an old format file. The status bar displays informations on the record date & time, the current/max record, and the converting status.


Each .csv file record generated is composed of several fields separated by “;” characters. You can convert these files by selecting the entire first column, then by clicking menu “Data”, “Convert...”. It will open the converter assistant, which proposes three steps:

- Step 1 : choose “Delimited” then press **next** button,
- Step 2 : choose only “semicolon”, then press **next** button,
- Step 3 : select “Text” columns data format , then press **end** button.

Fields will be displayed in each column.

1.5 IMPORT FROM MOBILE


This window is used to manage recorded trace on mobile. It allows user to download, delete or modify a comment of a recorded trace.

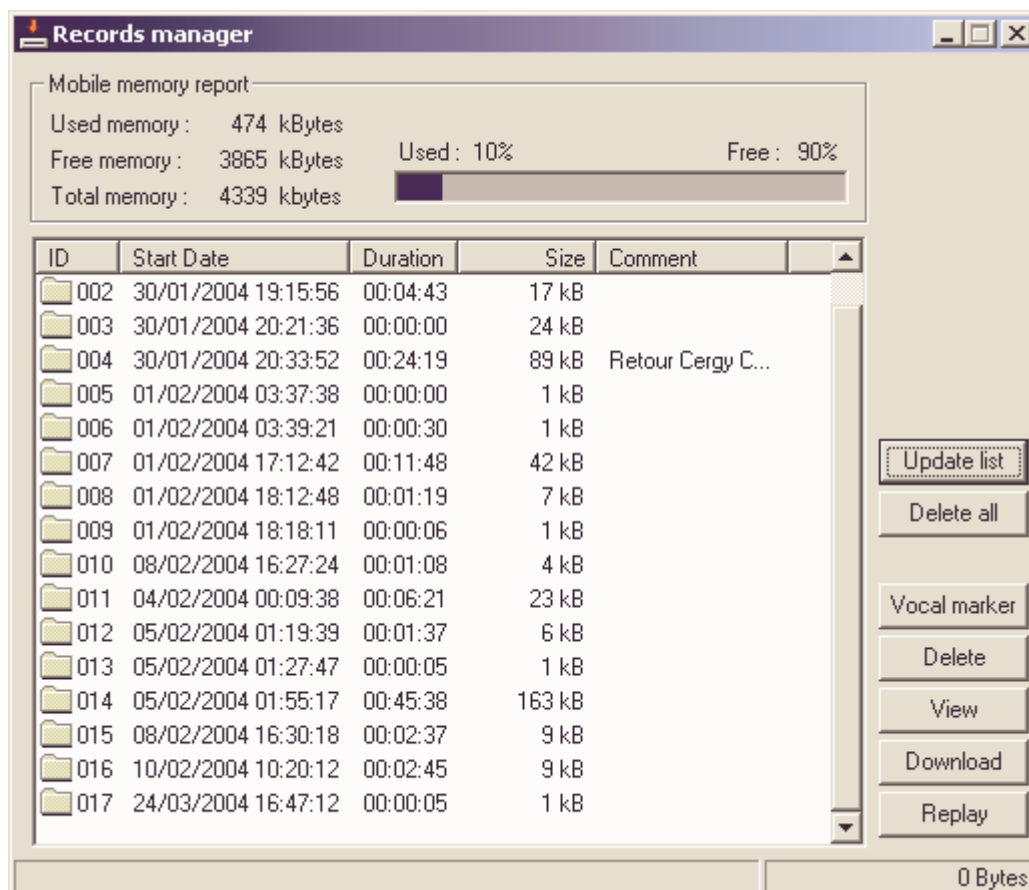

1.6 IMPORT FROM IRDA FILE

This menu is used to convert trace file transmitted by IRDA to trace file which can be replayed with OT drive.

1.7 SERIAL PORTS SETTINGS

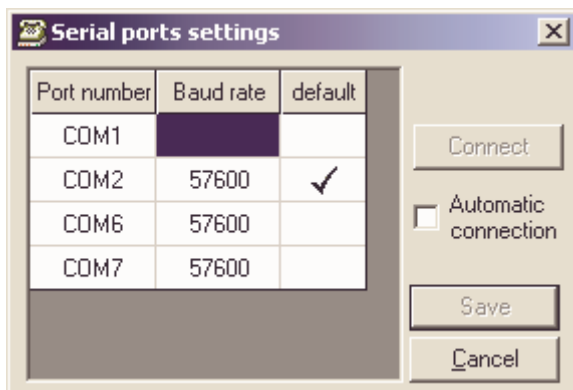

This window is used to configure the different COM ports on the PC, to define the default baud rate per ports, to set the default port COM and to enable/disable the automatic connect function.

To define the baud rate, the user should use the list box that appears when he clicks in the **Baud Rate** column.

To set the default port COM, the user should double clicks in the **default** column

The **automatic connection** check box returns or set the state of the automatic connection function.

When the automatic connection function is enabled, when the user click the connect button or choose connect in file menu, the software try to connect automatically to the OT. No parameter is required to user.


The com port connected to the mobile trace port must always be set to 57600 baud.

1.8 EXIT

This menu is used to exit the application, all active traces are deactivated.


2. TOOLS

To use this menu the mobile must be connected.

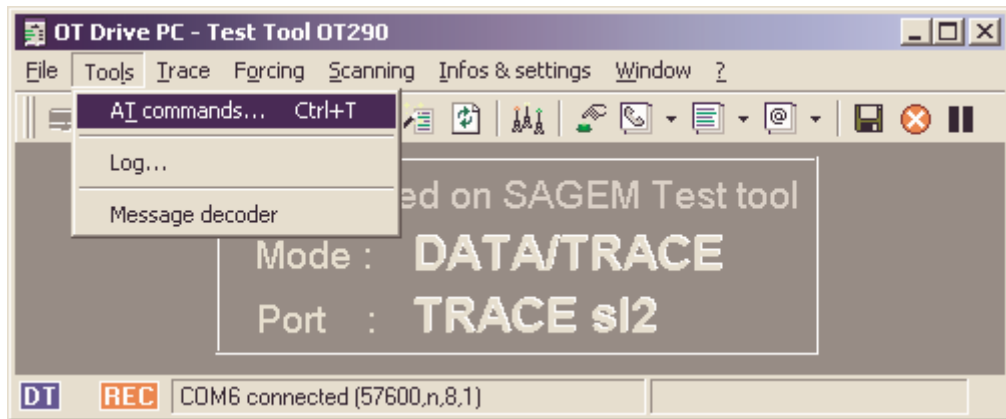

2.1 AT COMMANDS:

The mobile can use AT commands. The following window appears:

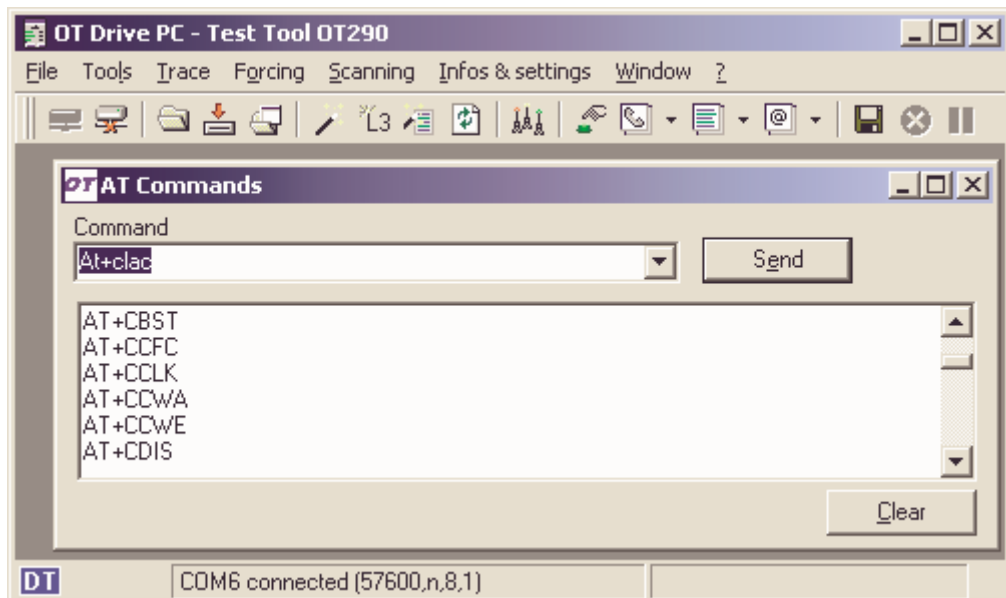

Responses of AT commands are displayed in the list box that can be cleared and a combo box store the latest AT commands sent. At commands window is available in DATA or TRACE mode.

If the mobile is connected in TRACE mode or in DATA/TRACE, you can send AT commands during a **TRACE** session.

Note : it is not possible to send AT command on a trace port during a data transfer session.

Special use :

It is possible to reconfigure the mode by sending a specific at command.


The syntax of this command is:

- **at+ctr?** : ask for the current mode
- **at+ctr=?** : ask for available modes
- **at+ctr=0** : change the mobile mode into DATA
- **at+ctr=1** : change the mobile mode into TRACE
- **at+ctr=2** : change the mobile mode into DATA/TRACE (**Only available with OT having two serial ports**)

For example:

If your current mode is TRACE, and if you send "at+ctr=0" or "at+ctr=2" to change to DATA or DATA/TRACE mode, then the **AT Commands** window will be closed and **OTDrivePC** will take into account the new mode.

If your current mode is DATA/TRACE, and if you send "at+ctr=0" or "at+ctr=1" to change to DATA or TRACE mode, then the following window appears:

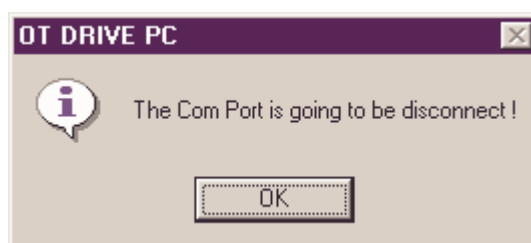


After clicking the OK button, OT Drive PC closes all windows and disconnects the COM port.


Remark : AT+CLAC command lists all AT commands supported by the mobile.
AT commands are specified in GSM recommendation [07.07].

2.2 LOG

Exchange between mobile and PC are logged in this window. Each message is partially decoded.

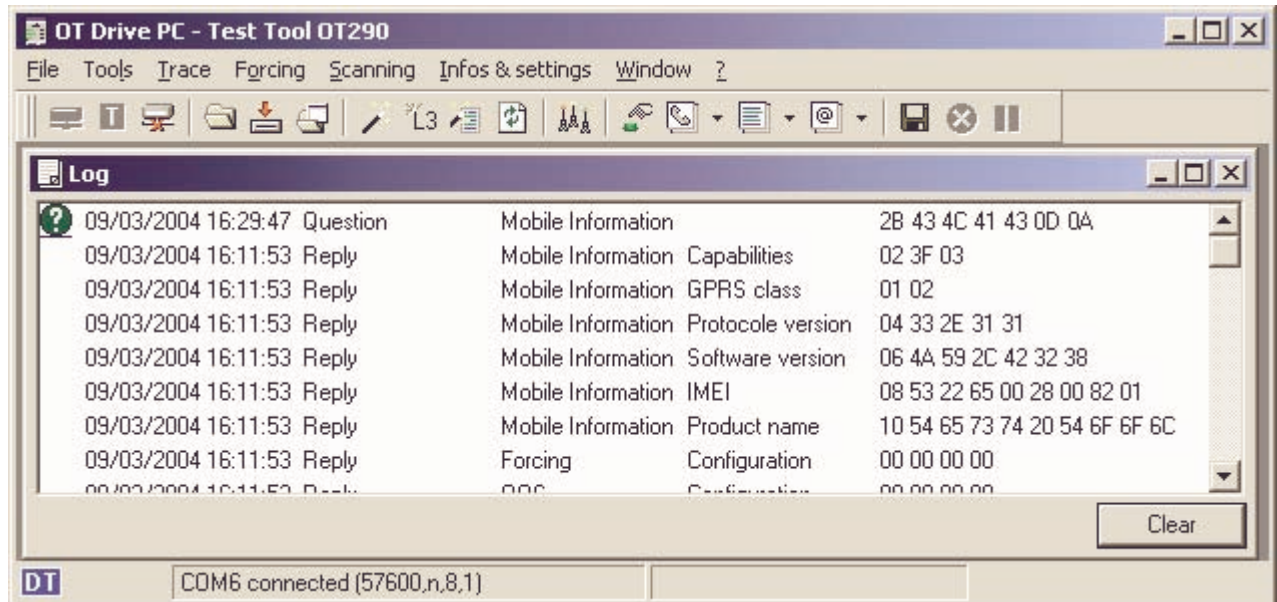


2.3 MESSAGE DECODER

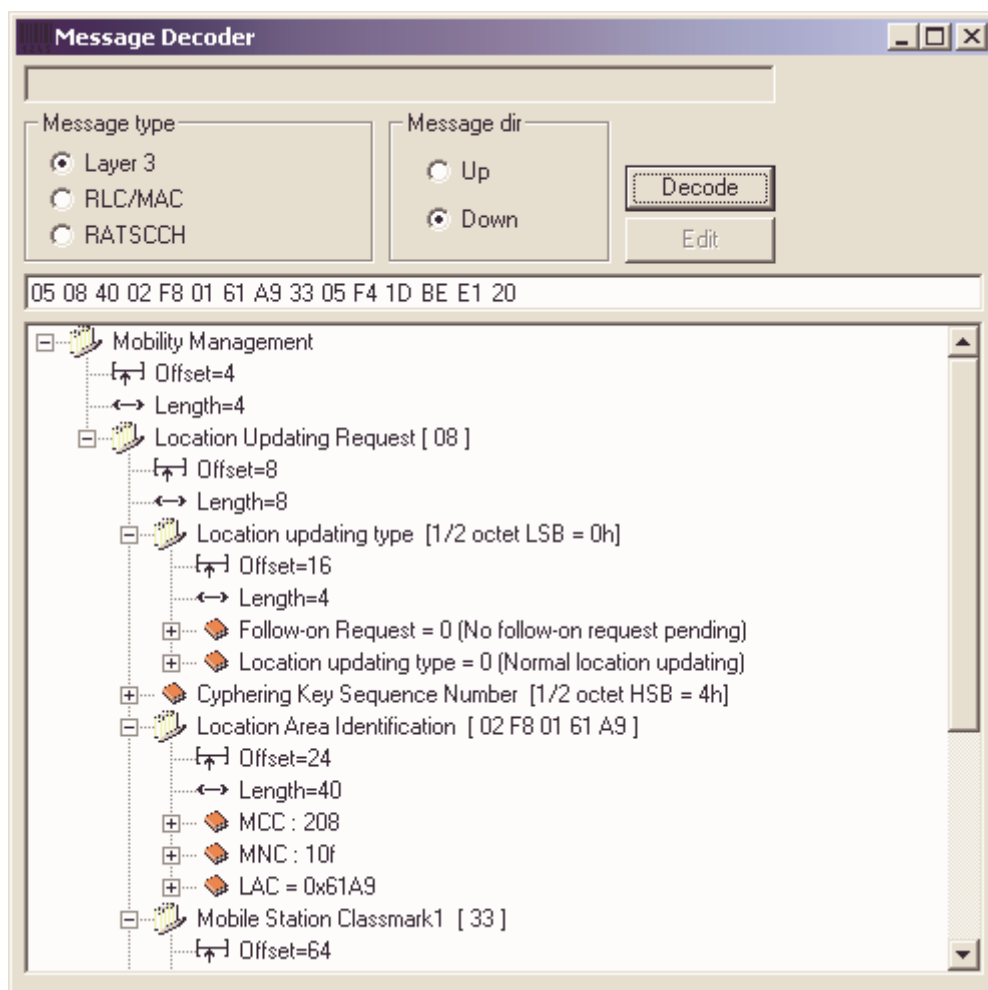

This window is used to decode protocol message. User can copy message content in the textbox and then decode message.

3. TRACE

This menu allows to activate or to deactivate trace messages and their associated trace windows.

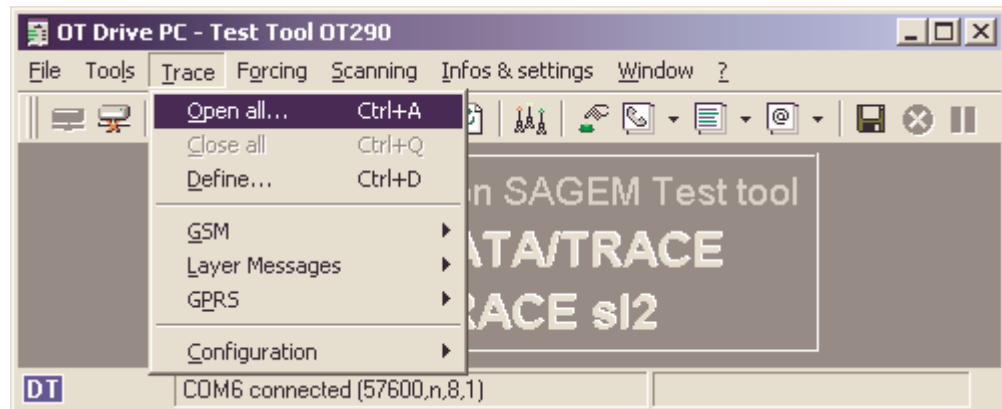


This menu is only available if OT drive is connected to an OT trace port. A right click anywhere in the main Window makes this menu visible as well.

The sub menu **Open all** activates all traces and shows each associated window.

The sub menu **Close All** closes all active windows and disables associated trace.

The sub menu **Define** allows user to activate traces from different set by using the window shown as below:

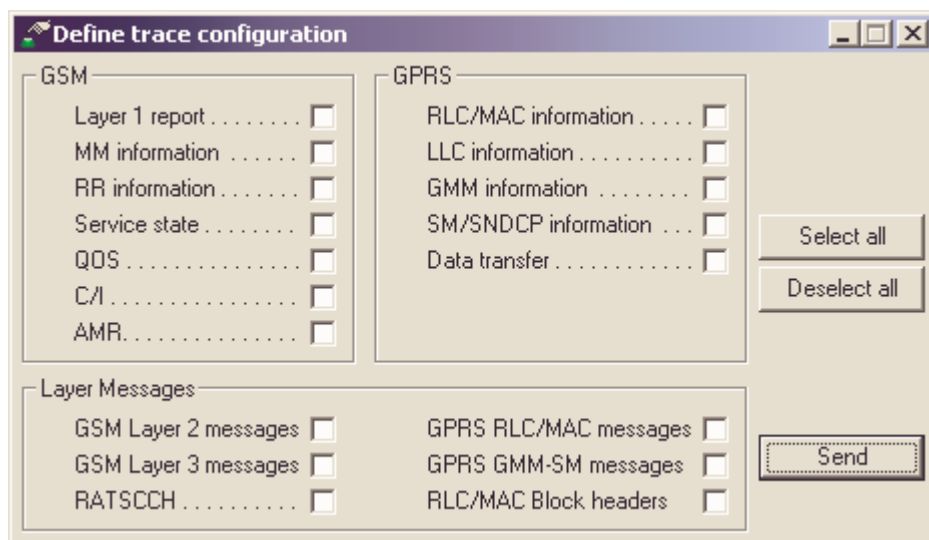

The sub menu **Window** allows user to save or restore an OT Drive trace configuration. Windows size and windows positions are saved.


The sub menu **GSM** regroups the set of traces concerning the GSM Layers.

The sub Menu **Interlayer Messages** regroups the set of traces concerning Layer messages.

The sub menu **GPRS** regroups the set of traces concerning the GPRS layers.

The sub menu **Trace configuration** regroupes items concerning the Trace management.

3.1 GSM

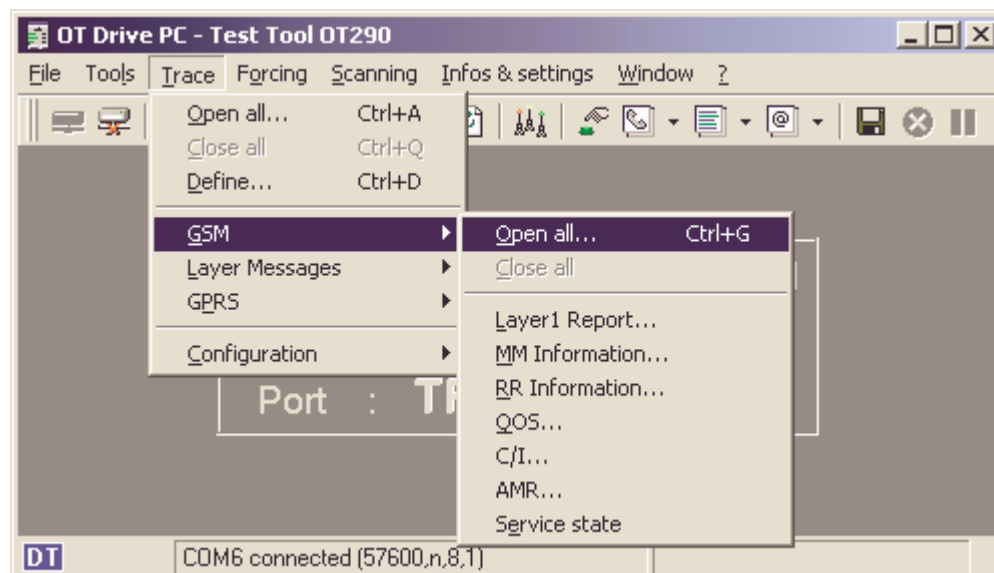

The **Open All** and **Close All** sub menu are used respectively to :


1. Activate all GSM traces and show their associated windows
2. Stop GSM traces and unload their associated windows.



The GSM set of traces is accessible by clicking the GSM toolbar button.

3.1.1 LAYER 1 Information

Layer 1 Report windows are presented below:

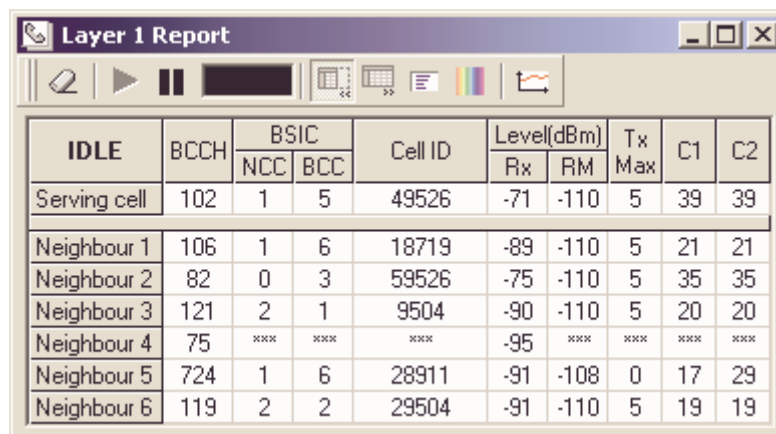

IDLE	BCCH	BSIC		Cell ID	Level(dBm)		Tx Max	C1	C2
		NCC	BCC		Rx	RM			
Serving cell	102	1	5	49526	-71	-110	5	39	39
Neighbour 1	106	1	6	18719	-89	-110	5	21	21
Neighbour 2	82	0	3	59526	-75	-110	5	35	35
Neighbour 3	121	2	1	9504	-90	-110	5	20	20
Neighbour 4	75	xxx	xxx	xxx	-95	xxx	xxx	xxx	xxx
Neighbour 5	724	1	6	28911	-91	-108	0	17	29
Neighbour 6	119	2	2	29504	-91	-110	5	19	19

GSM – IDLE

- **BCCH:** Current channel number in idle mode
- **NCC:** Network Code Colour
- **BCC:** BTS Code Colour
- **Rx Level:** Current value of RX_LEV_NCELL
- **RM Level:** Current value of RX_LEV_ACCESS_MIN
- **Tx Max:** Current value of MS_TXPWR_MAX_CCH
- **C1, C2:** Weakening criteria
- **Delta FN:** Frame Number
- **QBO:** Quarter Bit Offset
- **Cell reselection hysteresis:** This parameter is encoded as specified in [04.08], according to the following mapping :
 - 0 dB
 - 2 dB
 - 4 dB
 - ...
 - 14 dB
- **Cell reselection offset:** The Cell Reselection Offset field is encoded as specified in [05.08], according to the following mapping :
 - 0 dB
 - 2 dB
 - 4 dB
 - ...
 - 126 dB
- **Penalty time:** This parameter is encoded as specified in [05.08], according to the following mapping :
 - 20s
 - 40s
 - 60s
 - ...
 - 620s
 - no Temporary Offset

- **Temporary offset:** This parameter is encoded as specified in [05.08], according to the following mapping :
 - 0 dB
 - 10 dB
 - 20 dB
 - ...
 - 60 dB
 - Infinity
- **GPRS indicator:** Indicates whether the cell is GPRS or not. Take the following value:
 - YES
 - NO
- **RA Colour:** Take the value from 0 to 7

GSM – DEDICATED

Layer 1 report - DEDICATED								
DEDICAT.	BCCH	TA	PL	Rx Lev(dBm)		Rx Qual		BCCH Rx(dBm)
				Full	Sub	Full	Sub	
Serving cell	102	2	5	-74	-74	0	0	-72
	BCCH	NCC	BCC	RX Lev(dBm)		Delta FN		QBD
Neighbour 1	82	0	3	-80		0		0
Neighbour 2	106	1	6	-87		96203		1320
Neighbour 3	119	2	2	-90		1695983		4516
Neighbour 4	121	2	1	-92		1696005		2740
Neighbour 5	724	1	6	-92		1695612		2121
Neighbour 6	741	0	7	-102		2298185		665

3.1.2 MM Information

This function activates the visualisation of the **MM Information** window:

MM Information	
Ciphering Infos	
State	Ciphering Activated
Key Kc	F9 25 0E 65 56 CB CC 00
Algo	A5/1
Kc number	04
TMSI	15 2C C2 93
T3212	30
Localisation Infos	
PLMN	208 - 10F
LAC	25001
Cell Identity	59526

- **TMSI:** Temporary Mobile Subscriber Identity
- **T3212** indicates the timeout (in decihour) value for the periodic updating. It ranges from 0 to 255 (T3212 = 0 means infinite timeout, i.e. the mobile shall not perform any periodical updating).
- **MCC:** Mobile Country Code
- **MNC:** Mobile Network Code
- **LAC:** Localisation Area Code

3.1.3 RR Information


This function activates the visualisation of the **RR Information** window:

- **General Information**

- **BCCH**: Serving cell frequency
- **NCC, BCC**: Serving cell BSIC
- **Mode**: current mode of the mobile
 - IDLE
 - DEDICATED

- **IDLE mode:**

In idle mode, this message represents the current configuration of the "Control Channel" and the paging sub-channels of the mobile.

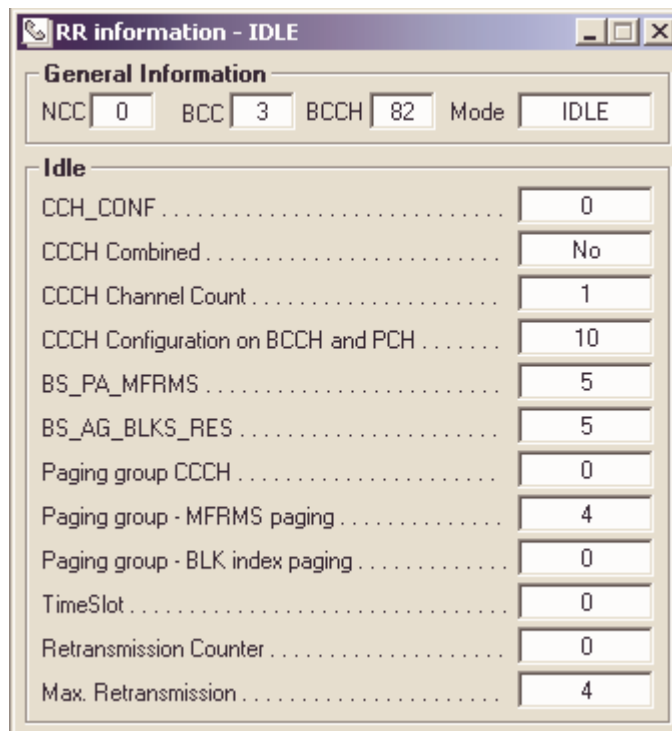

RR information - IDLE	
General Information	
NCC	0
BCC	3
BCCH	82
Mode	IDLE
Idle	
CCH_CONF	0
CCCH Combined	No
CCCH Channel Count	1
CCCH Configuration on BCCH and PCH	10
BS_PA_MFRMS	5
BS_AG_BLKES_RES	5
Paging group CCCH	0
Paging group - MFRMS paging	4
Paging group - BLK index paging	0
TimeSlot	0
Retransmission Counter	0
Max. Retransmission	4

- **CCH_CONF**: CCH Configuration
- **CCCH Combined**: value of the state of CCCH:
 - Yes (combined)
 - No (not combined)
- **BS_PA_MFRMS**: Multi-frames between paging
- **BS_AG_BLKES_RES**: Access Grant Reserved Blocks
- **Paging group – MFRMS paging**: Multi-Frames paging
- **Paging group – BLK index paging**: Block index paging
- The **Max Retransmission** field can take the following value, according to [04.08]:
 - maximum 1 retransmission
 - maximum 2 retransmissions
 - maximum 4 retransmissions
 - maximum 7 retransmissions
- The **Retransmission counter** field indicates the current RACH retransmission counter value.

In dedicated mode, this message describes the "Current dedicated Channel" (TCH/SCDCCH). The information message slightly differs depending on whether or not the equipment is in "Hopping" mode.

- **DEDICATED mode with hopping**

RR information - Dedicated with Hopping

General Information
NCC: 0 BCC: 3 BCCH: 82 Mode: DEDICATED

Dedicated With Hopping
Channel type: TchF Number of Channels: 3
Channel mode: EFR Frequencies: 72, 96, 114
Timeslot: 0
SubChannel number: 0
TSC: 3
MAIO: 2
HSN: 23

- **Channel type** can take the following values:
 - Sdcch4
 - Sdcch8
 - TchF
 - TchH
- **TSC**: Training Sequence Code
- **ARFCN**: Dedicated frequency
- **MAIO**: Mobile Allocation Index Offset
- **HSN**: Hopping Sequence Number

3.1.4 GSM QoS Information

This function activates the visualisation of the **GSM Quality Of Service** Information window.

IDLE Mode:

GSM QoS

DSC Counter
Current: 18
Max: 18

RLP (%)
Up:
Down:

FER: 0
EFR: Active
DTX: Active
Handover Counter: 1/1

Reset

GSM QoS information are:

- **Downlink Signalling Counter** (current/Max)

- **RLP**: RLP Resume Rate in percentage, can be only used in DATA/TRACE mode.
- **FER Full**: Frame Erasure Rate in percentage
- **EFR**: available only if the operator supports EFR
 - Enhanced Full Rate inactive (equivalent to Full Rate active)
 - Enhanced Full Rate active
- **DTX**: depends on voice activity
 - Discontinuous Transmission inactive (voice activity)
 - Discontinuous Transmission active (no voice activity)
- **Handover Counter**


For the Handover Counter, two values will be displayed:

- The number of attempted Handovers
- The number of successful Handovers

Clicking on the reset button will reset the Handover Counter values.

DEDICATED Mode:


The Radio LinkTimeOut Counter replaces the DSC Counter

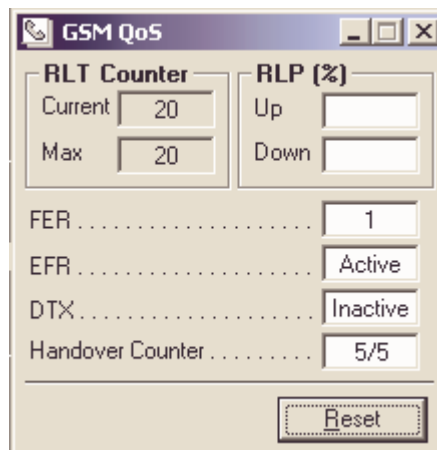

The image shows a software window titled "GSM QoS" with a standard Windows-style title bar (minimize, maximize, close buttons). The window contains several configuration fields:

- RLT Counter**: Two input fields, "Current" and "Max", both containing the value "20".
- RLP (%)**: Two input fields, "Up" and "Down", both empty.
- FER**: A label followed by a dotted line and an input field containing the value "1".
- EFR**: A label followed by a dotted line and a dropdown menu currently set to "Active".
- DTX**: A label followed by a dotted line and a dropdown menu currently set to "Inactive".
- Handover Counter**: A label followed by a dotted line and an input field containing the value "5/5".
- Reset**: A button located at the bottom right of the window.


3.1.5 C/I (only available since protocol version 3.9)

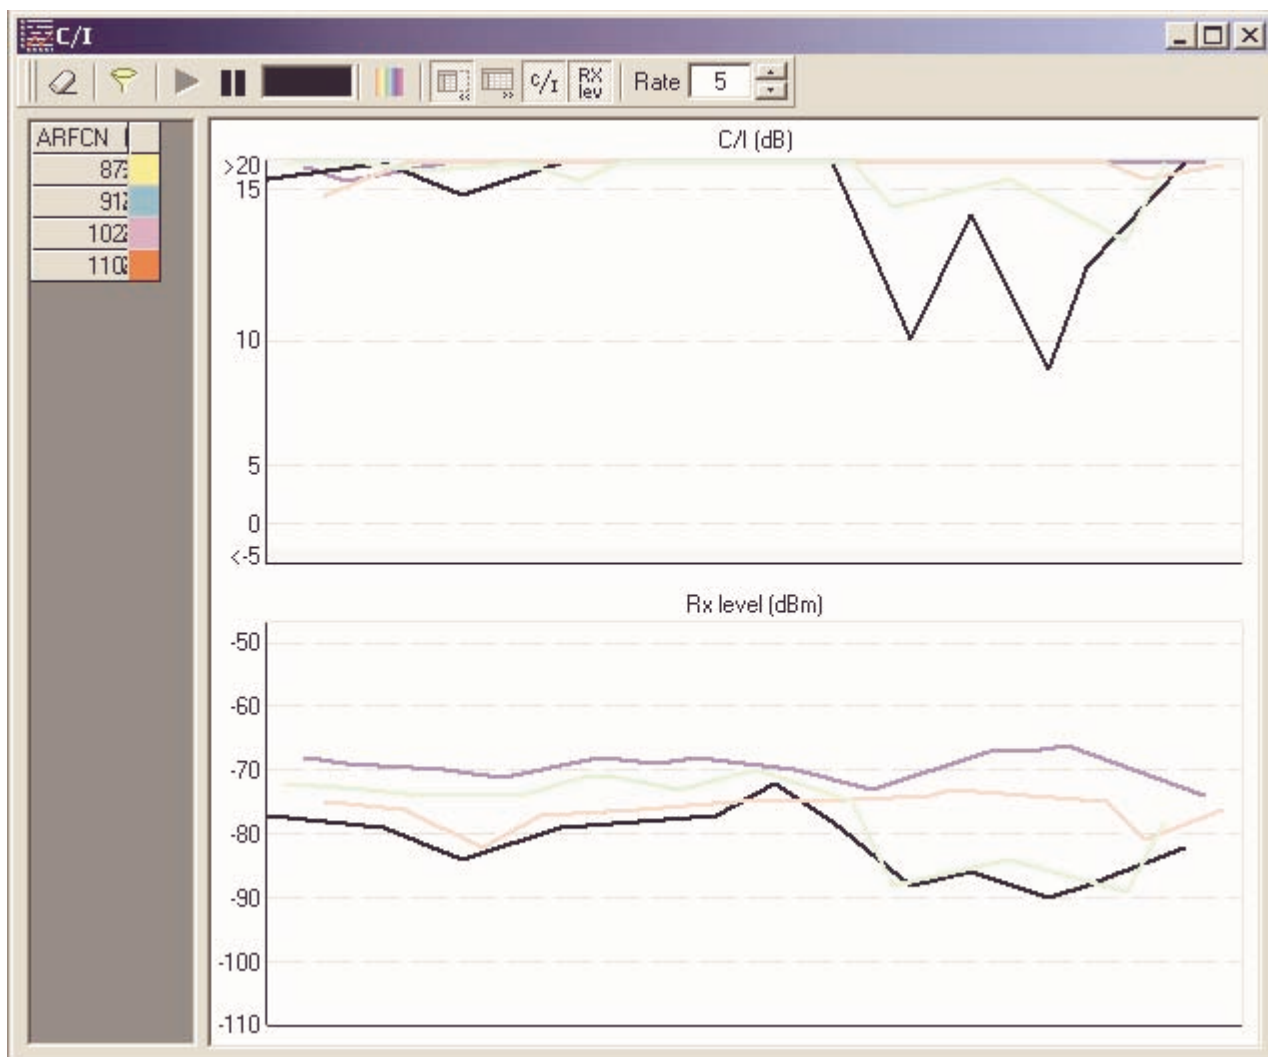

The C/I window displayed the carriage under interference level on radio frequency. It displayed also the RxLev for each RF.


In IDLE mode the C/I measure refer to the BCCH channel. In dedicated mode the C/I is measured on the Tch channel. If frequency hopping is implemented, the C/I is measured on each RF used to carry traffic.

C/I toolbar description :

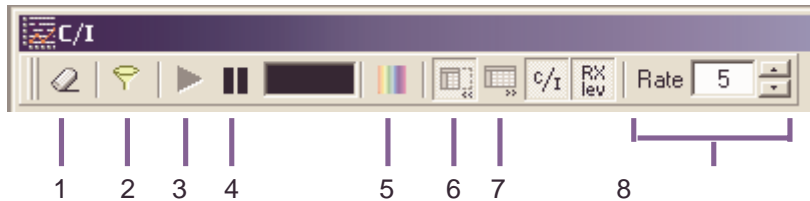

1) Clear all data

2) Filter function

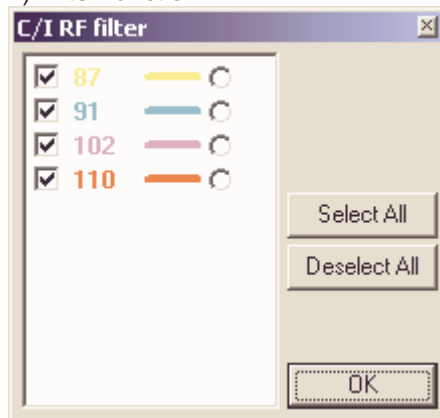

The CheckBox (situated on the left of the RF channel number) are used to show/hide the curves associated to this radio frequency.

The option button (situated on the right) are used to highlight a particular RF. If the active option button is clicked again, the current highlighted RF return to normal state.

3) Play : re-start the displaying refresh. This button is only enabled if the C/I displaying is in pause mode.

4) Pause : Stop the displaying refresh.

5) Color : This button display the color toolbox used do define particular color for the graphic. There is two possible color mode :

- Automatic : A palette of 10 fixed color is used
- Manual : Each RF have an associated color

6) Extend : Enlarge the graphic width to the window width

7) reduced : Reduce the graphic width to displaying also the data tab.

8) Calculation rate : It is possible to adjust the C/I calculation rate by using the up-down control or by entering the rate in the textbox.

3.1.6 Service State Information


If the **Service State** is required, it will be displayed in the status bar of the main window of the application:



The **Service State** can take the following values:

- No Service
- Emergency Service
- Normal Service
- Intermediate or undetermined state

3.2 LAYER MESSAGES

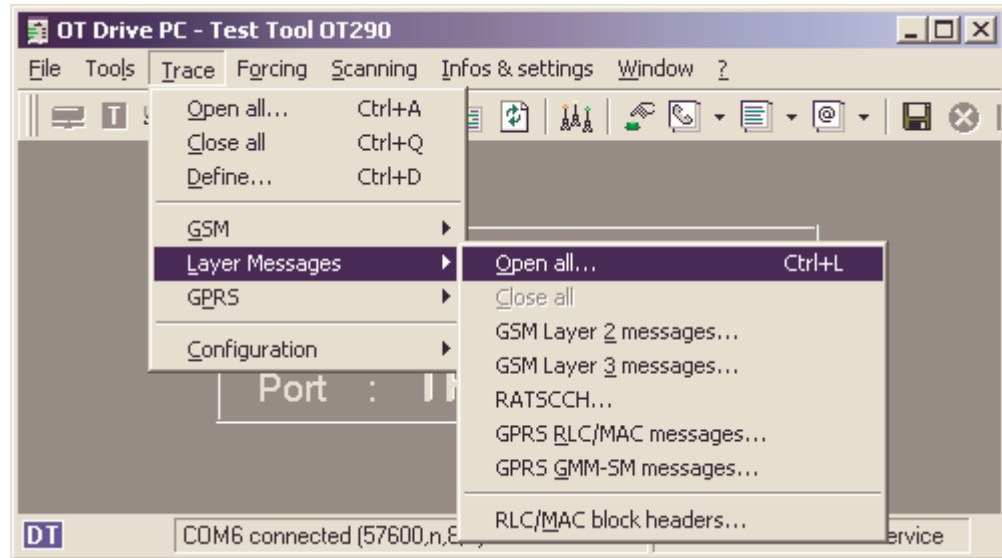

This function activates the visualization of layer message windows. As for the GSM set of traces, it is possible to activate or stop all layer message traces by only one click.



The layer message set of trace is manageable with the toolbar button as well

This screen gathers all the layer messages received from the mobile. It is a table divided in several parts as shown in the following example:

Layer Messages				
Timestamp	Channel	Dir	Type of message	BCCH
953685		↘	RR PAGING REQUEST TYPE 1	
953685	PCH	↘	RR PAGING REQUEST TYPE 1	
953653	SDCCH-UA	↘	NO INFORMATION FIELD	
953610	SACCH-UI	↗	RR MEASUREMENT REPORT	
953610		↗	RR MEASUREMENT REPORT	
953561	SDCCH-DISC	↗	NO INFORMATION FIELD	
953551	SDCCH-RR	↗	NO INFORMATION FIELD	
953551		↘	RR CHANNEL RELEASE	
953551	SDCCH-I	↘	RR CHANNEL RELEASE	
953501	SDCCH-RR	↗	NO INFORMATION FIELD	
953500		↘	MM LOCATION UPDATING ACCEPT	
953500	SDCCH-I	↘	MM LOCATION UPDATING ACCEPT	
953451	SDCCH-I	↗	RR CLASSMARK_CHANGE	
953450		↗	RR CLASSMARK_CHANGE	
953449	SDCCH-UA	↘	MM LOCATION UPDATING REQUEST	
953420		↘	RR SYSTEM INFORMATION TYPE 5	

Fields contain the GSM or GPRS interlayer frames. It is compliant with GSM Recommendations. It depends on Sub Type field:

- For GSM L2 and L3 messages format, see GSM Recommendation [04.08],
- For GPRS RLC/MAC messages format, see GSM Recommendation [04.60],

- For GPRS GMM-SM messages format, see GSM Recommendation [04.08].
- Newest information is added on the top row of the grid.

3.2.1 Message Column

- **GSM Layer 2 Message** according to the following channels:

- RACH
- BCCH
- PCH
- CBCH
- EPCH
- SDCCH

Either the MS or the BS data link, according to [04.08] uses the following commands and responses:

- "-I" : Information
- "-RR" : Receive Ready
- "-RNR" : Receive Not Ready
- "-REJ" : Reject
- "-SABM" : Set Asynchronous Balanced Mode
- "-DM" : Disconnected Mode
- "-UI" : Unnumbered Information
- "-DISC" : Disconnect
- "-UA" : Unnumbered Acknowledgement
- "-_***" : Unknown
- "NO INFORMATION FIELD"

- SACCH
This channel uses the same commands and responses then SDCCH.
- FACCH_F
This channel uses the same commands and responses then SDCCH.
- FACCH_H
This channel uses the same commands and responses then SDCCH.
- CCCH
- AGCH

- **GSM L3 Messages**
- **GPRS RLC/MAC (Only available with OT having GPRS capability)**
- **GPRS GMM-SM (Only available with OT having GPRS Capability)**

3.2.2 Dir Column

Shows whether we have an Uplink information or a Downlink information.

3.2.3 Type of message Column

Identify a specific Interlayer message according to the PD and MT.

- When frames contain fill bits, the type of message cell displays **FILL FRAME**, according to [04.06].
- A data bit is used to indicate segmentation of layer 3 messages units on data link layer frames. Layer 3 messages, which needs to be segmented, shall only be transported by I-frames, according to [04.08].
- Following information will be added to the type of message text, showing the Segmentation State:
 - L3 SEG BEGIN : begin of the segmentation message
 - L3 SEG NEXT : in succession of the segmentation message
 - L3 SEG END : end of the segmentation message

3.2.4 Data Column

Display the message in hexadecimal.

3.2.5 Time Stamp Column

All inter-layer messages are time-stamped.

3.2.6 BCCH Column

BCCH radio frequency is available only for the Inter Layer 2 messages system information.

3.2.7 Toolbar description



- 1 : The **Print** button allows to print grid data to your default printer,
- 2 : The **Copy** button allows to copy selected information, the "ctrl+c" key is also available.
- 3 : The **Clear** button allows to clear all grid data.
- 4 : The **Decode** Button allows to decode the message. It is only available if the message type is different from GSM layer 2.
- 5 : **Search** button is used to search a specific string in the message type column
- 6 : **Show/hide** message content
- 7 : **PLAY** button is used to restart the data insertion in the grid.
- 8 : The **PAUSE** button is used to stop data insertion in the grid, but it does not stop the trace. An another click restarts the data insertion in the grid. The pause system is a mean to freeze the screen to analyze data.

- 9 : The **go to top** button is used to return to the first row (latest data inserted)
- 10 : This textbox indicates the pause state. If the pause is disable, the textbox is empty otherwise the word PAUSE blinked.
- 11 : The GSM layer 2 check button allows user to activate or deactivate GSM layer 2 messages trace.
- 12 : The GSM layer 3 check button is used to activate/deactivate GSM Layer 3 messages trace.
- 13 : The AMR check button is used to activate RATSCH message trace
- 14 : The RLC/MAC checkbox activate/deactivate RLC/MAC control messages trace.
- 15 : This button is used to show the state of RLC/MAC control message filter
- 16 : The GMM-SM Checkbox let the user to enable/disable GMM-SM messages trace.


3.2.8 RLC/MAC blocks header

Only available since the 3.7 protocol version and with mobile having GPRS capability.

This submenu allows user to access to a window in which are displayed all (data and control) RLC/MAC blocks headers as shown below:

RLC MAC data block header												
TimeStamp	Message type	TFI	BSN	Ext	Downlink				UpLink			
					RRBP	USF	PR	FBI	CV	SI	R	TI
1587574	DATA	1	4	YES	****	6	0-2dB	NO				
1587574	DATA	1	3	YES	****	6	0-2dB	NO				
1587574	DATA	1	2	YES	****	6	0-2dB	NO				
1587571	PACKET POWER CONTROL/TIMING ADVANCE		0		0	6	0	NO				
1587571	PACKET POWER CONTROL/TIMING ADVANCE		0		0	6	0	NO				
1587570	DATA	1	1	NO	****	6	0-2dB	NO				
1587570	DATA	1	0	YES	****	6	0-2dB	NO				
1587538	PACKET SYSTEM INFORMATION TYPE 3BIS		0		0	6	0	NO				
1587533	PACKET SYSTEM INFORMATION TYPE 1		0		0	7	0	NO				
1587529	PACKET SYSTEM INFORMATION TYPE 1		0		0	6	0	NO				
1587525	PACKET SYSTEM INFORMATION TYPE 3		0		0	6	0	NO				
1587520	PACKET DOWNLINK ASSIGNMENT		0		0	6	0	NO				
1587512	PACKET SYSTEM INFORMATION TYPE 2		0		0	6	0	NO				
1587507	PACKET SYSTEM INFORMATION TYPE 1		0		0	7	0	NO				
1587503	PACKET SYSTEM INFORMATION TYPE 1		0		0	6	0	NO				
1587481	ACCESS BURST (Packet Ctrl Ack)											
1587475	PACKET UPLINK ACK/NACK		0		0	6	0	NO				
1587475	PACKET UPLINK ACK/NACK		0		0	6	0	NO				
1587469	DATA	1	13	YES					1	NO	>1	NO
1587466	PACKET UPLINK ACK/NACK		0		0	4	0	NO				


Toolbar :

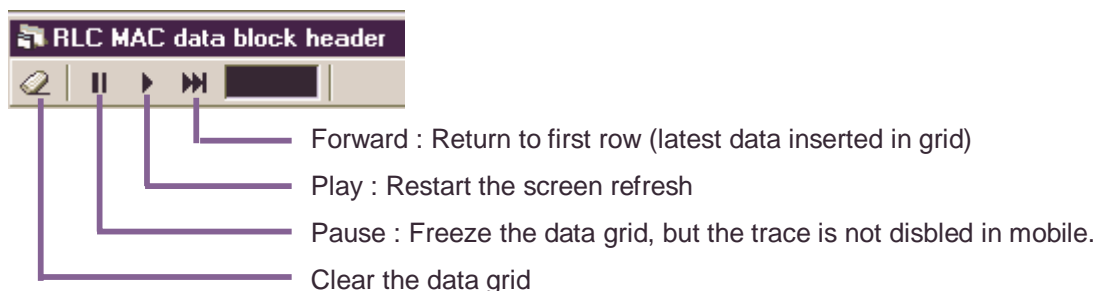


Field :

For the field description see GSM Recommendation [04.60]. Each name use in columns headers is exactly the same as use and describe in GSM Recommendation.

3.3 GPRS (ONLY AVAILABLE WITH OT HAVING GPRS CAPABILITY)

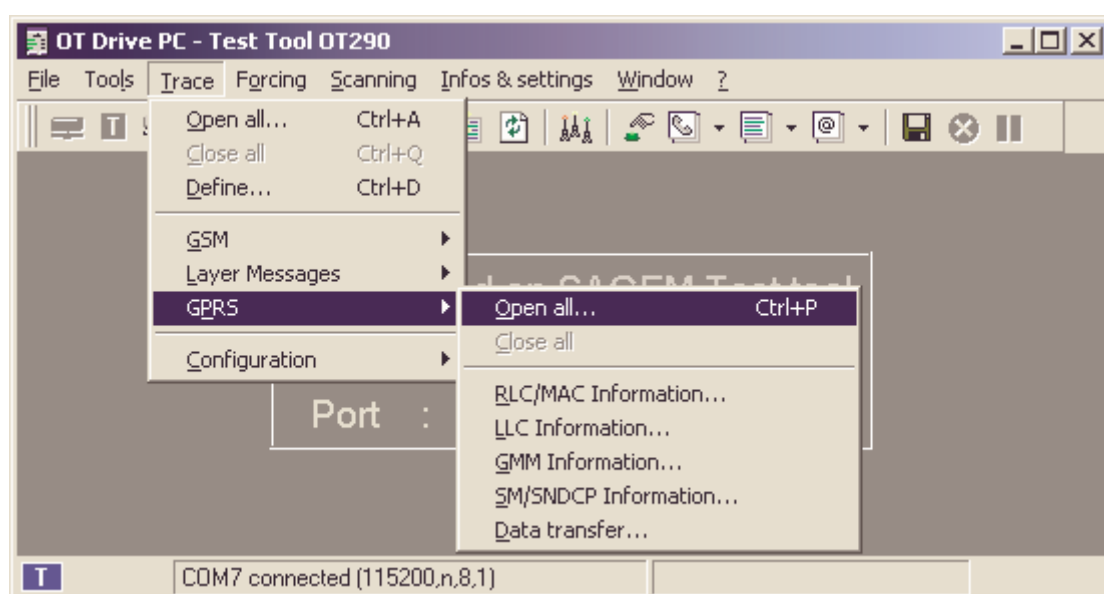


The **Open All** and **Close All** sub menu are used respectively to activate all GPRS traces and show their associated windows and to stop GPRS traces and unload their associated windows.

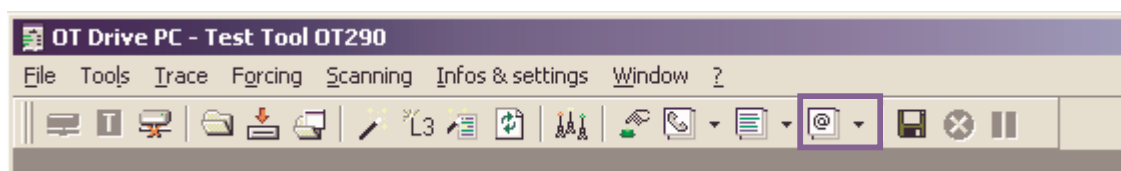

The GPRS trace is controllable through the toolbar button.

3.3.1 RLC/MAC Information (Only available with OT having GPRS Capability)

The **RLC/MAC Information** window is presented below:

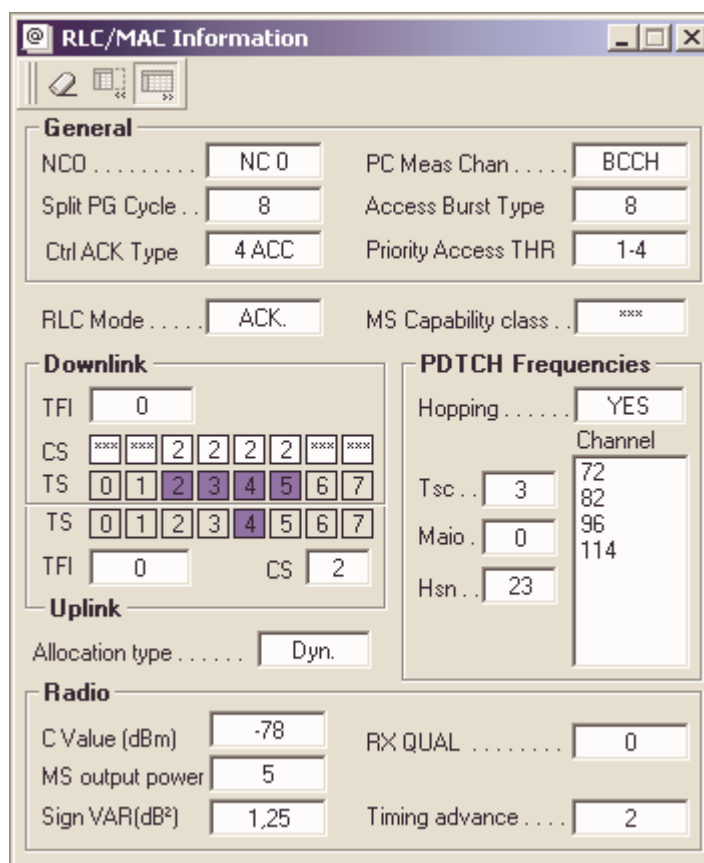

- **RLC Mode**
 Acknowledge mode
 Unacknowledged mode
- **PDTCH Configuration**
 This frame resume the Packet Data Transfer Channel frequency configuration
- **Downlink Coding scheme**
 The coding field indicates the coding scheme used during data transfer. The possible values are the following:
 - CS1
 - CS2
 - CS3 (To be tested)
 - CS4 (To be tested)
 The coding scheme per timeslot is available since the 3.8 protocol version
- **Uplink Coding scheme**
 The coding field indicates the coding scheme used during data transfer. The possible values are the following:
 - CS1
 - CS2
 - CS3 (To be tested)
 - CS4 (To be tested)
- **TBF**


Identifies the state of the TBF Uplink and Downlink; it induces the validity of the corresponding TFI number and Coding Scheme. The TBF can be opened or closed. Furthermore, if no TBF is open then the RLC Mode is invalid.

- Uplink and Downlink **timeslot allocation**: timeslots appear in blue if they are allocated
- **Type of allocation** field are the following :
 - Single block
 - dynamic
 - fixed
 - no allocation
- **PC MEAS CHAN**
This bit is encoded as specified in [04.08] § 10.5.2.37b:
 - downlink measurements for power control performed on BCCH
 - downlink measurements for power control performed on PDCH
- **Network Control Order**
This field is encoded as specified in [04.08] § 10.5.2.37b:
 - NC0. MS controlled cell re-selection, no measurement reporting
 - NC1. MS controlled cell re-selection, MS sends measurement reports
 - NC2. Network controlled cell re-selection, MS sends measurement reports
- **SPLIT PG CYCLE**
This field is encoded as specified in [04.08] § 10.5.5.6:
 - 0 : no DRX used by the MS
 - 1 : SPLIT_PG_CYCLE = 1
 - 2 : SPLIT_PG_CYCLE = 2
 - ...
 - 64 : SPLIT_PG_CYCLE = 64
 - 65 : SPLIT_PG_CYCLE = 71
 - 66 : SPLIT_PG_CYCLE = 72
 - 67 : SPLIT_PG_CYCLE = 74
 - 68 : SPLIT_PG_CYCLE = 75
 - 69 : SPLIT_PG_CYCLE = 77
 - 70 : SPLIT_PG_CYCLE = 79
 - 71 : SPLIT_PG_CYCLE = 80
 - 72 : SPLIT_PG_CYCLE = 83
 - 73 : SPLIT_PG_CYCLE = 86
 - 74 : SPLIT_PG_CYCLE = 88
 - 75 : SPLIT_PG_CYCLE = 90
 - 76 : SPLIT_PG_CYCLE = 92
 - 77 : SPLIT_PG_CYCLE = 96
 - 78 : SPLIT_PG_CYCLE = 101
 - 79 : SPLIT_PG_CYCLE = 103
 - 80 : SPLIT_PG_CYCLE = 107
 - 81 : SPLIT_PG_CYCLE = 112
 - 82 : SPLIT_PG_CYCLE = 116
 - 83 : SPLIT_PG_CYCLE = 118
 - 84 : SPLIT_PG_CYCLE = 128
 - 85 : SPLIT_PG_CYCLE = 141
 - 86 : SPLIT_PG_CYCLE = 144
 - 87 : SPLIT_PG_CYCLE = 150
 - 88 : SPLIT_PG_CYCLE = 160
 - 89 : SPLIT_PG_CYCLE = 171
 - 90 : SPLIT_PG_CYCLE = 176
 - 91 : SPLIT_PG_CYCLE = 192
 - 92 : SPLIT_PG_CYCLE = 214
 - 93 : SPLIT_PG_CYCLE = 224
 - 94 : SPLIT_PG_CYCLE = 235

- 95 : SPLIT_PG_CYCLE = 256
- 96 : SPLIT_PG_CYCLE = 288
- 97 : SPLIT_PG_CYCLE = 320
- 98 : SPLIT_PG_CYCLE = 352
- **ACCESS BURST TYPE**
This bit is encoded specified in [04.60] § 12.24:
 - 8 bit access bursts
 - 11 bit access bursts
- **CONTROL ACK TYPE**
This bit is encoded specified in [04.60] § 12.24:
 - default format for PACKET CONTROL ACKNOWLEDGEMENT is 4 access bursts
 - default format for PACKET CONTROL ACKNOWLEDGEMENT is an RLC/MAC control block
- **PRIORITY ACCESS THR**
This field is encoded as specified in [04.08] § 10.5.2.37b:
 - packet access is not allowed in the cell
 - packet access is not allowed in the cell
 - packet access is not allowed in the cell
 - packet access is allowed for priority level 1
 - packet access is allowed for priority level 1 to 2
 - packet access is allowed for priority level 1 to 3
 - packet access is allowed for priority level 1 to 4
 - packet access is allowed for priority level 1 to 4
- **RXQUAL**
This field is encoded as specified in [04.08] § 10.5.5.6.
- **MS Output Power**
This field is encoded as specified in [05.05] § 4.1.1.

3.3.2 LLC Information (Only available with OT having GPRS Capability)

The **LLC Information** window is presented below:

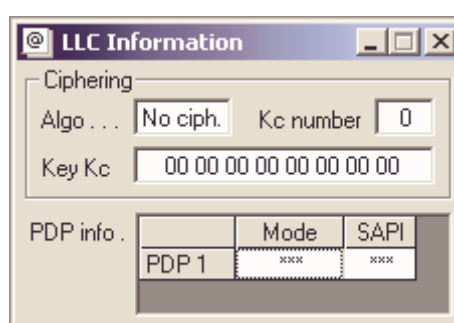

Mode and SAPI are displayed according to the PDP Context.

- **Ciphering algorithm**
The possible values of the ciphering algorithm are the following:
 - No ciphering
 - GPRS Encryption Algorithm (GEA/1)

If this parameter is set to "No ciphering" then the Ciphering Key and Kc Sequence Number are not valid.

- **Mode**
The mode identifies the acknowledge mode for each PDP Context. The validity of this parameter is determined using the LLC SAPI. The possible values are the following:

- Acknowledge mode (i.e. an SABM connection has been established)
- Unacknowledged mode


• LLC SAPI

This field indicates for each PDP Context the LLC SAPI used:

- ***: no SAPI used (PDP Context INACTIVE or ACTIVE PENDING). In that case the corresponding A/U bit is not valid.
- 3 : SAPI 3
- 5 : SAPI 5
- 9 : SAPI 9
- 11 : SAPI 11

3.3.3 GMM Information (Only available with OT having GPRS Capability)

The **GMM Information** window is presented below:

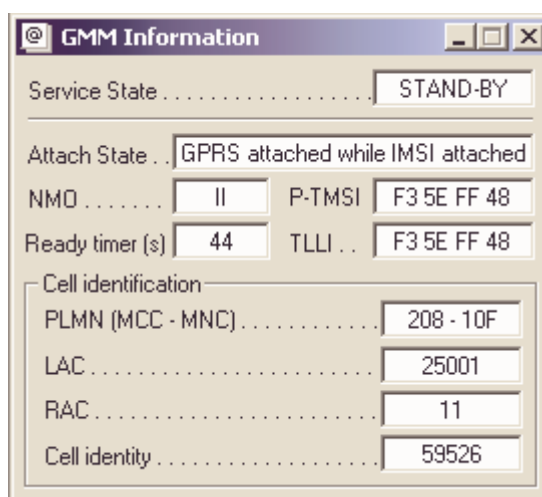

Service State	STAND-BY
Attach State ..	GPRS attached while IMSI attached
NMD	II
P-TMSI	F3 5E FF 48
Ready timer (s)	44
TLLI ..	F3 5E FF 48
Cell identification	
PLMN (MCC - MNC)	208 - 10F
LAC	25001
RAC	11
Cell identity	59526

• **GMM service state**

The possible values of the GMM service state field are the following:

- STAND-BY
- READY
- IDLE

• **Network Mode**

This field is encoded as specified in [04.60] § 12.24:

- Network Mode of Operation I
- Network Mode of Operation II
- Network Mode of Operation III

• **Attach State**

The Attach State field can take the following values:


- not GPRS-attached
- GPRS-attached while IMSI-attached
- GPRS only-attached
- combined-attached

• **GMM READY timer (T3314)**

The T3314 timer is given in seconds. If this field is set to 0xFFFF, then the T3314 timer is deactivated.

3.3.4 SM/SNDCP Information (Only available with OT having GPRS Capability)

The **SM/SNDCP Information** window is presented below:

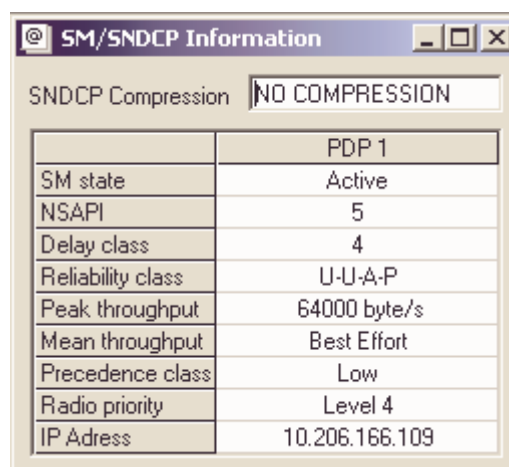

	PDP 1
SM state	Active
NSAPI	5
Delay class	4
Reliability class	U-U-A-P
Peak throughput	64000 byte/s
Mean throughput	Best Effort
Precedence class	Low
Radio priority	Level 4
IP Address	10.206.166.109

SM Information are displayed according to PDP Context. The maximum of PDP Context is equal to 11.

SM Information (Only available with OT having GPRS Capability)

SM Information values are:

- **SM State**
The possible values of the "SM State" field are the following:
 - PDP INACTIVE
 - PDP ACTIVE PENDING
 - PDP INACTIVE PENDING
 - PDP ACTIVE
If SM State = PDP INACTIVE or PDP ACTIVE PENDING, then all the other fields of the message are not valid, except for the NSAPI field that is also valid when SM State = PDP ACTIVE PENDING.
- **NSAPI**
The NSAPI field is encoded as specified in [04.08] § 10.5.6.2.
- **Delay Class**
The Delay Class field is encoded as specified in [04.08] § 10.5.6.5:
 - Delay Class 1
 - Delay Class 2
 - Delay Class 3
 - Delay Class 4 (best effort)
- **Reliability Class**
The Reliability Class field is encoded as specified in [04.08] § 10.5.6.5:
 - A-A-A-P: Acknowledged GTP, LLC, and RLC, Protected data
 - U-A-A-P: Unacknowledged GTP, Acknowledged LLC and RLC, Protected data
 - U-U-A-P: Unacknowledged GTP and LLC, Acknowledged RLC, Protected data
 - U-U-U-P: Unacknowledged GTP, LLC and RLC, Protected data
 - U-U-U-P: Unacknowledged GTP, LLC and RLC, Unprotected data
- **Peak Throughput**
The Peak Throughput field is encoded as specified in [04.08] § 10.5.6.5:
 - Up to 1 000 byte/s
 - Up to 2 000 byte/s

- Up to 4 000 byte/s
- Up to 8 000 byte/s
- Up to 16 000 byte/s
- Up to 32 000 byte/s
- Up to 64 000 byte/s
- Up to 128 000 byte/s
- Up to 256 000 byte/s
- **Mean Throughput**
The Mean Throughput field is encoded as specified in [04.08] § 10.5.6.5:
 - 100 byte/h
 - 200 byte/h
 - 500 byte/h
 - 1 000 byte/h
 - 2 000 byte/h
 - 5 000 byte/h
 - 10 000 byte/h
 - 20 000 byte/h
 - 50 000 byte/h
 - 100 000 byte/h
 - 200 000 byte/h
 - 500 000 byte/h
 - 1 000 000 byte/h
 - 2 000 000 byte/h
 - 5 000 000 byte/h
 - 10 000 000 byte/h
 - 20 000 000 byte/h
 - 50 000 000 byte/h
 - best effort
- **Precedence Class**
The Precedence Class field is encoded as specified in [04.08] § 10.5.6.5:
 - High Priority
 - Normal Priority
 - Low Priority
- **Radio Priority**
The Radio Priority field is encoded as specified in [04.08] § 10.5.7.2:
 - priority level 1 (highest)
 - priority level 2
 - priority level 3
 - priority level 4 (lowest)
- **IP Address**
The IP Address is encoded according to the IETF convention.

SNDCP Information (Only available with OT having GPRS Capability)

If header and data compression are both inactive then the message "NO COMPRESSION" will be displayed.


If header compression is active and data compression inactive then the message "HEADER" will be displayed.

If header compression is inactive and data compression active then the message "DATA" will be displayed.

If header and data compression are both active then the message " DATA AND HEADER " will be displayed.

3.3.5 GPRS Data transfer information (Only available with OT having GPRS Capability)

GPRS Quality Of Service Information window is presented below:

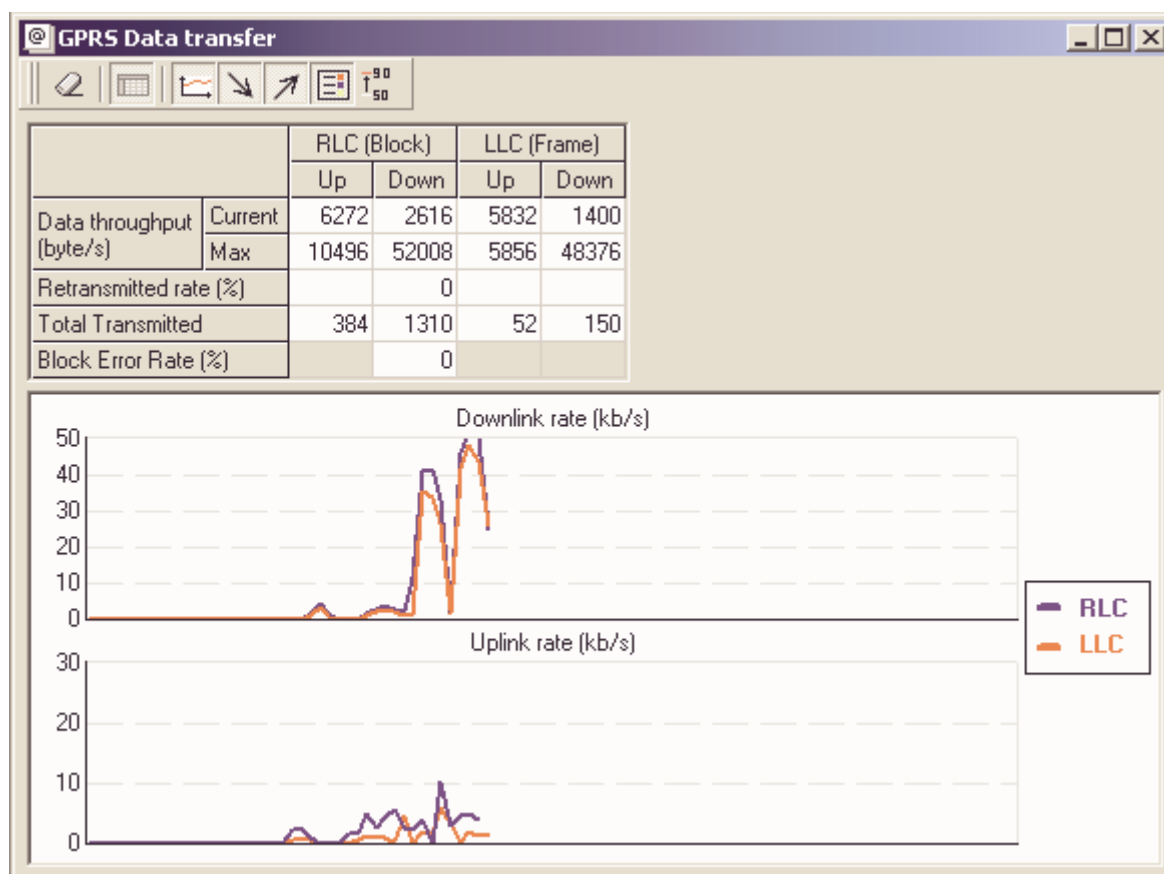

Reset button resets the max counters in the window.

- **RLC Data Throughput:** RLC Data throughput in bytes/s

The RLC/MAC Data throughput takes into account RLC/MAC Data blocks only, including retransmissions and header parts. It is computed over a period of **1 second** and reported according to the following criteria:

- when the mobile is in READY mode, RLC/MAC Data Throughputs are reported at the end of every reporting period
- when the mobile is not in READY mode, RLC/MAC Data Throughputs are reported only if the number of transmitted bytes has changed over the reporting period

- **Retransmitted Blocks Rate:** retransmitted RLC Blocks Rate in percentage

The Retransmitted RLC Block Rate is computed over a period of **1 second**. It is defined as follows:

Direction	Definition
UPLINK	Retrans. Block Rate = $N_{\text{NACKED}} / (N_{\text{FIRST TRANS}} + N_{\text{NACKED}})$ where: <ul style="list-style-type: none"> • N_{NACKED} = number of blocks sent in the NACKED state • $N_{\text{FIRST TRANS}}$ = number of blocks that have been transmitted for the 1st time
DOWNLINK	Retrans. Block Rate = $N_{\text{LOST}} / N_{\text{TOTAL}}$

	<p>where:</p> <ul style="list-style-type: none"> • N_{LOST} = number of blocks detected as lost. A block or a group of blocks is considered as lost when the OT detects a gap in the block sequence • N_{TOTAL} = number of blocks that have been supposedly sent. It is estimated based on the Sequence Number of the latest received block. As a consequence it does not include retransmitted blocks.
--	--

The Retransmitted RLC Block Rate is filtered according to the following criteria:

- in the Uplink: it is reported only if ($N_{FIRST\ TRANS} + N_{NACKED}$) has changed over the reporting period.
- in the Downlink: it is reported only if N_{TOTAL} has changed over the reporting period.

- **Total RLC Blocks Transmitted:** when the PDP context is closed ,values are reinitialised to 0

The Total number of RLC blocks transmitted is defined as follows:

- only DATA blocks are take into account
- all received or sent blocks are considered, including those blocks that are retransmitted in NACKED or PENDING ACK state

It is reported every second, unless it has not changed over the reporting period.

- **Downlink RLC BLER:** Downlink RLC BLER in percentage

The Downlink RLC BLER is computed over a period of **1 second**. It is defined as follows :

$$BLER = N_{ERRORED} / N_{TOTAL} \quad \text{where:}$$

- $N_{ERRORED}$ = number of data blocks received with a bad CRC and a TFI corresponding to the current downlink TFI allocated to the mobile
- N_{TOTAL} = total number of data blocks received with a TFI corresponding to the current downlink TFI allocated to the mobile

NOTE: the received RLC/MAC blocks are filtered according to the PAYLOAD TYPE and TFI fields of their RLC/MAC headers. Those fields can be affected by transmission errors, so the two parameters above ($N_{ERRORED}$ and N_{TOTAL}) can only be **estimated**. As a consequence the reported value must be considered as an **estimation** of the Block Error Rate of the radio link between the network and that particular mobile.

- **LLC Frame Rate:** retransmitted LLC Frame Rate in percentage

The Retransmitted LLC Frame Rate is computed over a period of **1 second**. It is defined as follows:

Direction	Definition
UPLINK	<p>Retrans. Frame Rate = $N_{RETRANS} / N_{TOTAL}$</p> <p>where:</p> <ul style="list-style-type: none"> • $N_{RETRANS}$ = number of frames that are not sent for the 1st time • N_{TOTAL} = total number of transmitted frames
DOWNLINK	<p>Retrans. Block Rate = N_{LOST} / N_{TOTAL}</p> <p>where:</p> <ul style="list-style-type: none"> • N_{LOST} = number of frames detected as lost. A frame or a group of frames is considered as lost when the OT detects a gap in the frame sequence • N_{TOTAL} = number of frames that have been supposedly sent. It is estimated based on the Sequence Number of the latest received frame. As a consequence it does not include retransmitted frames.

The Retransmitted LLC Frame Rate is filtered according to the following criteria:

- it is reported only if at least one LLC SAPI is in Acknowledged mode
- it is reported only if N_{TOTAL} has changed over the reporting period.

- **LLC Data Throughput:** LLC Data throughput in bytes/s

The LLC Data throughput traces are focused on the capacity that is offered by the LLC layer to upper layer in the User plane. As a consequence the LLC Data throughputs are defined as follows:

- only I and UI frames are considered
- only SAPI 3, 5, 9, and 11 are considered (i.e. User SAPIs)
- in LLC Acknowledged mode retransmissions are not take into account
- LLC header parts are not taken into account

The LLC throughputs are computed over a period of **1 second** and reported according to the following criteria:

- when the mobile is in READY mode, LLC Data Throughputs are reported at the end of every reporting period
- when the mobile is not in READY mode, LLC Data Throughputs are reported only if the number of transmitted bytes has changed over the reporting period


- **Total LLC Frame Transmitted:** when the PDP context is closed, values are reinitialised to 0

The Total number of LLC frames transmitted is defined as follows:

- only I and UI frames are considered
- only SAPI 3, 5, 9, and 11 are considered (i.e. User SAPIs)
- in LLC Acknowledged mode retransmissions are not take into account

It is reported every second, unless it has not changed over the reporting period.

3.4 TRACE CONFIGURATION

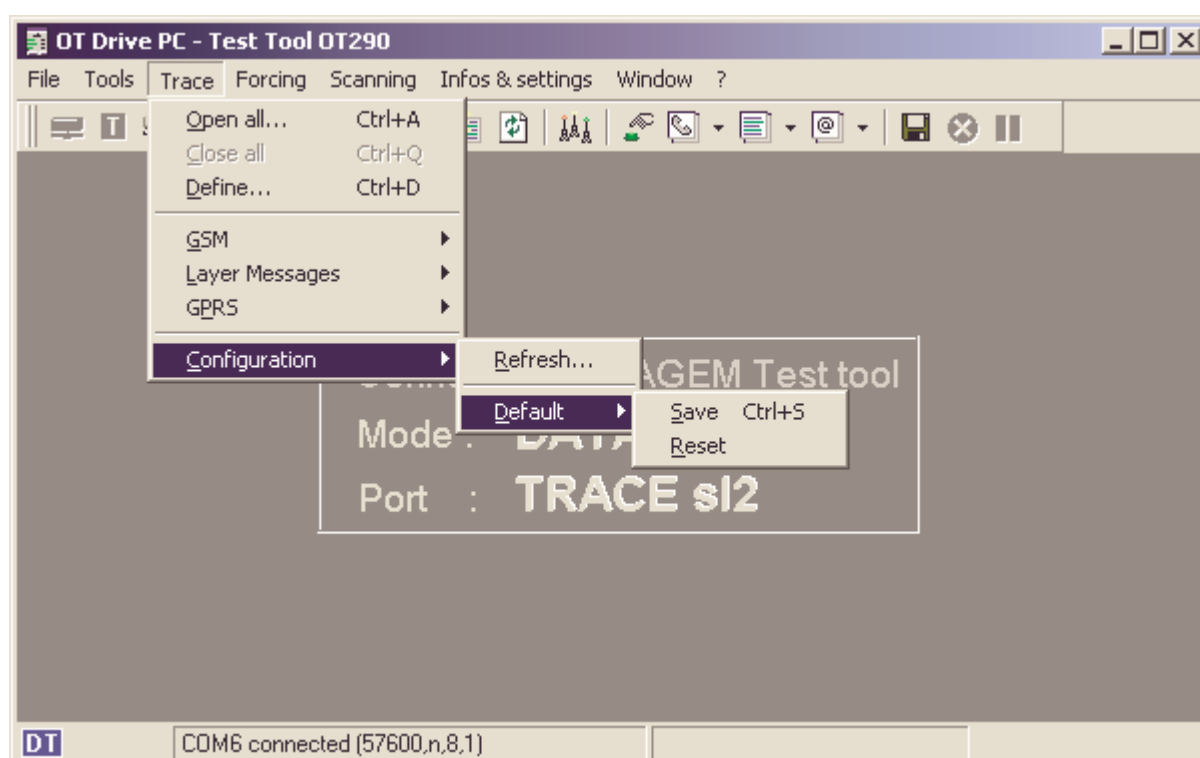

3.4.1 Refresh

The current trace configuration (defined by the different checked sub menus in trace menu) is refreshed. Each trace activated is requested an another time to the OT.

3.4.2 Default configuration

3.4.2.1 Save Configuration

The “**save** mobile configuration” control will command the mobile to save the OTR mobile configuration (trace currently activated). The purpose of this function is to be able to restore the user's configuration at the powering up.


3.4.2.2 Reset (no trace activated)

The “**reset** configuration” control will restore the default setting of the mobile. The user's saved configuration is erased and replaced by the default configuration.

4. FORCING

4.1 GENERAL FORCING

The **Forcing Functions** window is shown below:

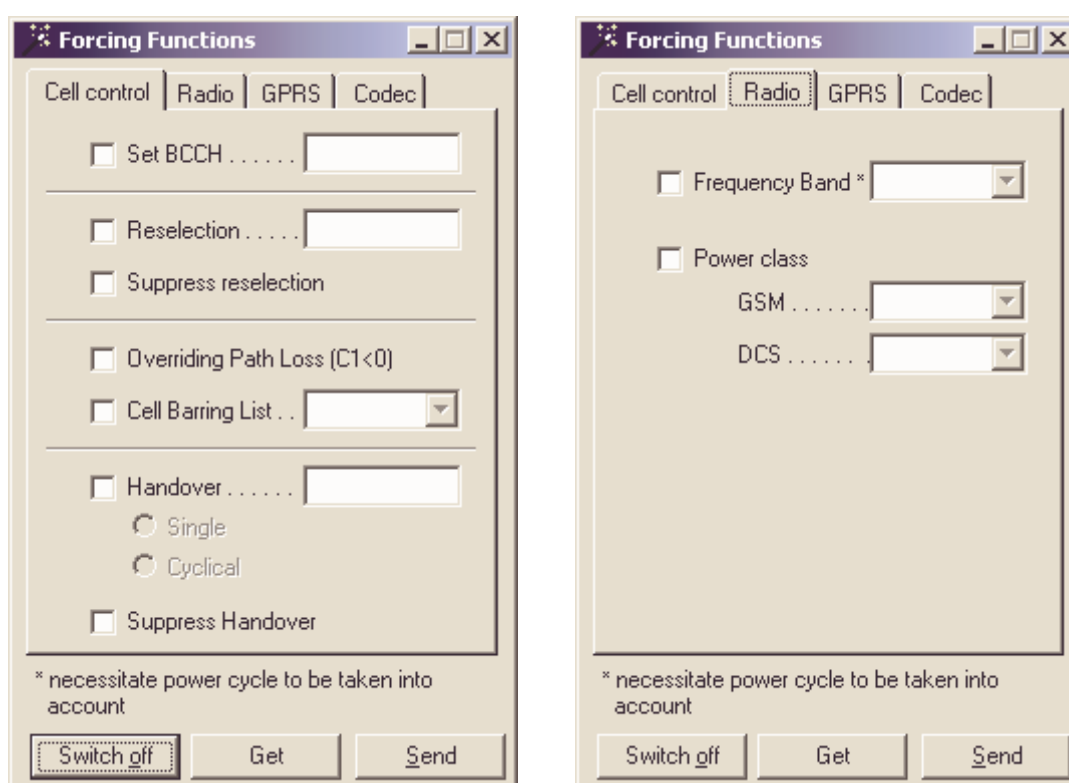

Forcing Functions

Cell control | Radio | GPRS | Codec

☐ Set BCCH

☐ Reselection

☐ Suppress reselection

☐ Overriding Path Loss (C1<0)

☐ Cell Barring List

☐ Handover

☐ Single

☐ Cyclical

☐ Suppress Handover

* necessitate power cycle to be taken into account

Switch off Get Send

Forcing Functions

Cell control | Radio | GPRS | Codec

☐ Frequency Band *


☐ Power class

 GSM

 DCS

* necessitate power cycle to be taken into account

Switch off Get Send

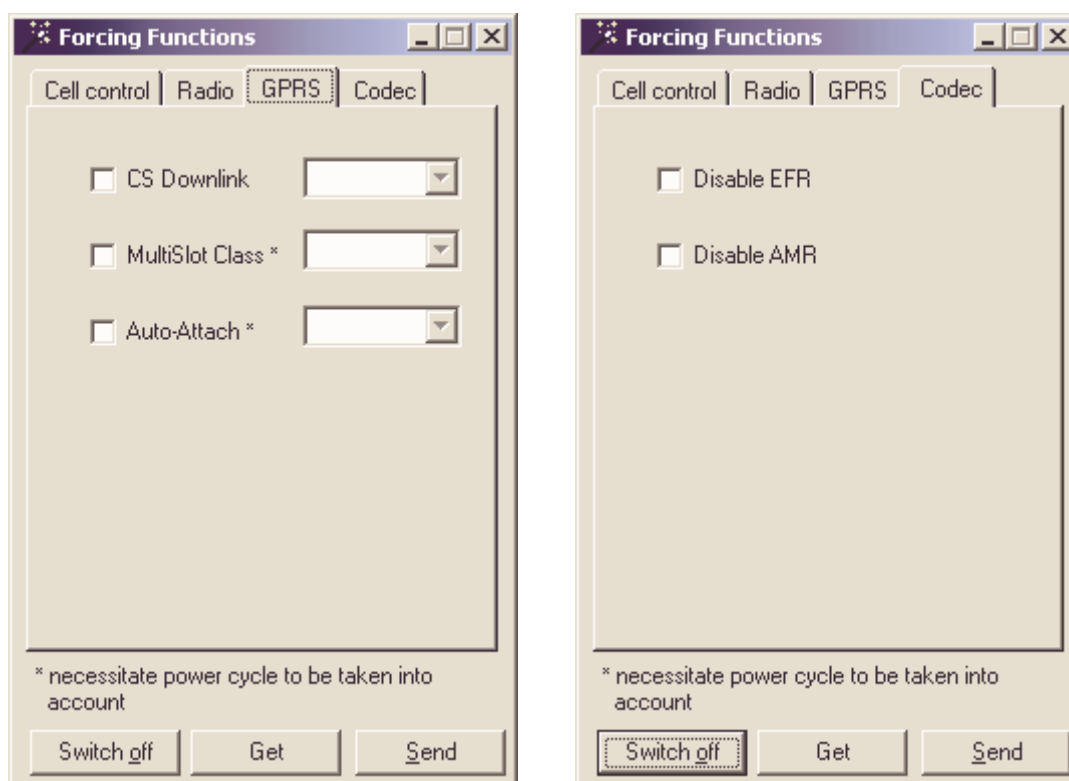

When the **Forcing Functions** window is opened, unspecific and specific messages are sent to the mobile to get the current activated forcing functions and their values.


The **Get Configuration** button allows to get value of activated forcing functions.

A forcing function can be activated or deactivated by clicking on the appropriate checkbox. Data needed for a forcing command are defined in edit or combo box. Finally, the **Send Configuration** button has to be pushed to send the forcing function configuration.

N.B : Cell Selection, Cell Reselection and Suppress Cell Reselection forcing functions are only available in IDLE mode

4.2 LAYER MESSAGE FORCING


This window is used to defines message modification parameter :

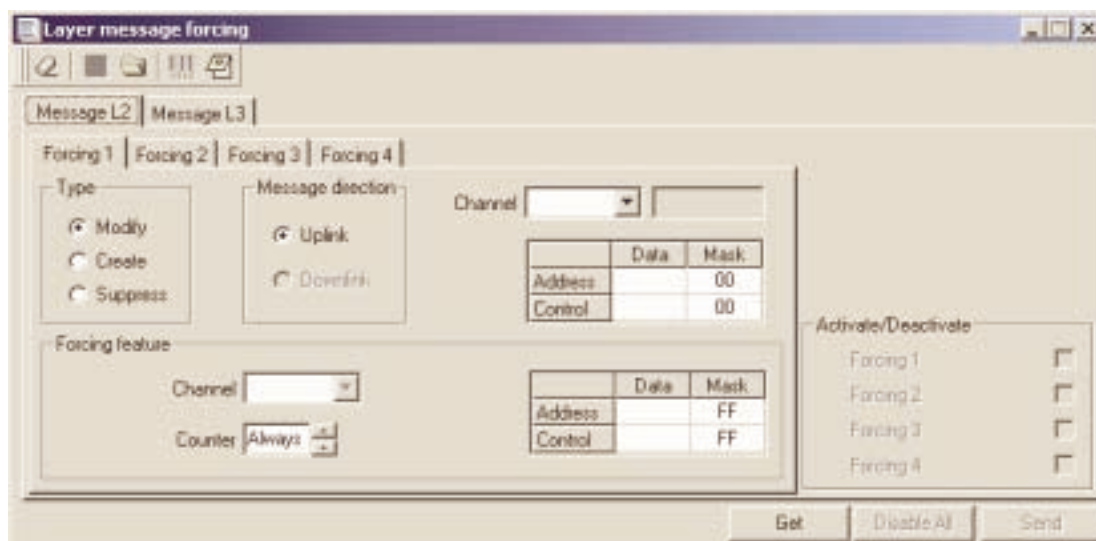

The 'Layer message forcing' window is used to define message modification parameters. It features tabs for 'Message L2' and 'Message L3'. Under 'Message L2', there are four 'Forcing' tabs (Forcing 1 to Forcing 4). Each forcing tab has a 'Type' section with radio buttons for 'Modify' (selected), 'Create', and 'Suppress'. A 'Message direction' section has radio buttons for 'Uplink' (selected) and 'Downlink'. A 'Channel' dropdown menu is present. Below these are 'Forcing feature' settings, including a 'Channel' dropdown and a 'Counter' set to 'Always'. To the right, there are two tables for 'Data' and 'Mask' values for 'Address' and 'Control' fields. For Forcing 1 and 2, the values are 00. For Forcing 3 and 4, the values are FF. An 'Activate/Deactivate' section on the right has checkboxes for each forcing level, all of which are currently unchecked. At the bottom are 'Get', 'Disable All', and 'Send' buttons.

4.3 LAYER 3 MODIFICATION

The Setting button displays the window below, where parameters for Layer 3 modify function can be defined:

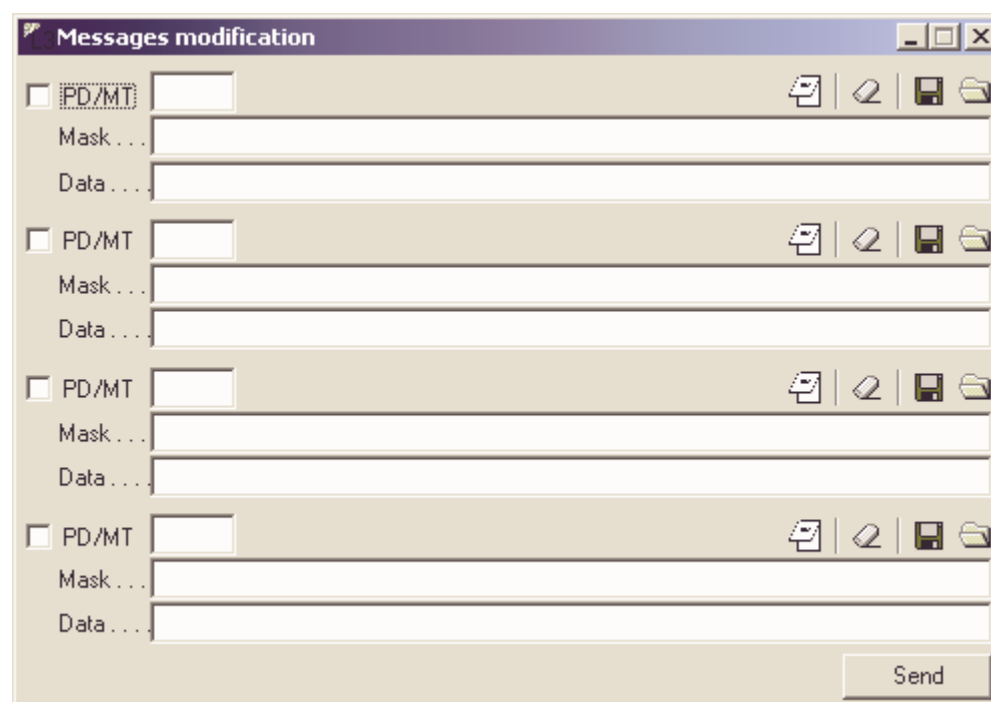

The 'Messages modification' window allows defining parameters for Layer 3 modification. It contains four identical rows, each with a 'PD/MT' checkbox and a text field. Below each row are 'Mask ...' and 'Data ...' text fields. To the right of each row are icons for file operations. A 'Send' button is located at the bottom right of the window.

NB:

- Values of parameters will be saved in the window if you push the **OK** button, otherwise if you close the window all values are lost
- Activate forcing function with empty values will display a warning message

GPRS Forcing are **only available with OT having GPRS capability.**

4.4 LOACTION UPDATE

This forcing function is used to raise a location update.

5. SCANNING

It is possible to activate RF Scanning, RF Measurement and BCCH Scanning.


A correct channel has to be entered for the following bands:

- **GSM_P** (channel 1 to 124)
- **DCS** (channel 512 to 885)
- **GSM_R** (channel 955 to 974) (**Only with the OT supporting the R band**)
- **GSM_E** (channel 975 to 1023 and 0)
- **PCS** (channel 512 to 810) (**only available on OT 1x9 and OT2xx**)

If RF Scanning or BCCH Scanning is activated from the MMI of the mobile, then all displayed windows will be closed and the **Scanning functions** window will appear.

- The selected tab indicate which type of scanning we are talking about
- If the scanning function is activated, the stop command button is enabled and tabs are locked else no scanning is running and the activate command button is enabled.
- The RF Scanning, the RF Measurement and the RF Scanning can only be used in **IDLE mode**

5.1.1 RF Scanning

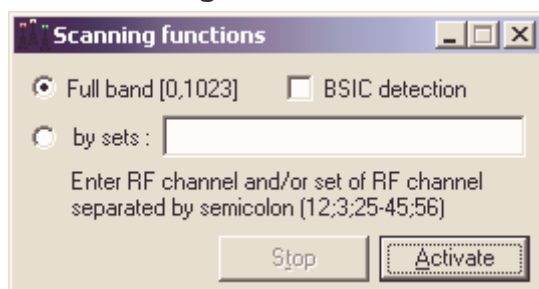

In the RF SCANNING mode, only the RF scanning is available and is used. All other capabilities of the mobile are inhibited. When the scanning stop, the previous trace configuration is restored.

The **RF Scanning** (full band) window is presented below:


RF Scanning (dBm)																
GSM-P	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	-59	-75	-100	-78	-58	-75	-83	-95	-69	-93	-99	-95	-102	-90	-101	-98
	-55	-71	-103	-74	-54	-71	-85	-96	-70	-97	-98	-94	-103	-91	-102	-100
	-51	-71	-103	-74	-51	-71	-85	-96	-70	-98	-98	-95	-100	-91	-102	-100
	-51	-72	-101	-74	-51	-71	-84	-96	-84	-98	-98	-95	-103	-91	-102	-79
DCS	512	513	514	515	516	517	518	519	520	521	522	523	524	525	526	527
	-105	-105	-106	-105	-105	-105	-105	-106	-105	-105	-106	-105	-105	-105	-105	-105
	-105	-106	-106	-106	-106	-105	-105	-106	-106	-105	-106	-105	-105	-105	-106	-105
	-106	-105	-105	-105	-106	-105	-105	-106	-105	-105	-106	-106	-105	-106	-105	-106
	-105	-105	-106	-106	-105	-105	-105	-105	-106	-106	-106	-106	-106	-106	-105	-105
GSM-E	975	976	977	978	979	980	981	982	983	984	985	986	987	988	989	990
	-105	-105	-104	-105	-106	-104	-103	-103	-105	-105	-104	-104	-103	-102	-104	-104
	-105	-104	-105	-105	-105	-104	-103	-104	-104	-105	-104	-104	-104	-103	-103	-104
	-104	-104	-104	-104	-104	-105	-103	-104	-104	-104	-104	-104	-104	-104	-103	-103
	-105	-105	-104	-105	-104	-104	-104	-104	-104	-104	-104	-104	-104	-105	-104	-104

Each grill represents a frequency band:

- **GSM_P** band (channel 1 to 124)
- **DCS** band (channel 512 to 885)
- **GSM_R** band (channel 955 to 974) (**Only with OT supporting R band**)
- **GSM_E** band (channel 975 to 1023 and 0)
- **PCS** band (channel 512 to 810) (**only available on OT 1x9 and OT2xx**)

When the RF Scanning is activated, the mobile sends first a reply of its configuration. If the RF Scanning is not taken into account, the TRACE Mode will be set to **Normal**.

5.1.2 BCCH Scanning

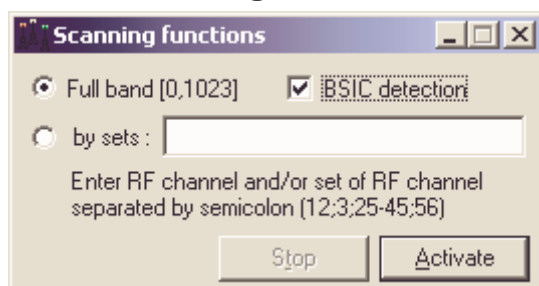

In this mode, all other capabilities of the mobile are inhibited. When the scanning stop, the previous trace configuration is restored. The BCCH SCANNING mode returns periodical traces for each scanned frequency.

As previous, you have to define the channel number:


- 1 to 124 for **GSM_P** band
- 512 to 885 for **DCS** band
- 955 to 974 for **GSM_R** (Only with OT supporting R band)
- 975 to 1023 or 0 for **GSM_E** band
- **PCS** band (channel 512 to 810) (only available on OT 1x9 and OT2xx)

This command window allows two different type of BCCH Scanning.

The scanning BCCH **Full Band**: This command activate a scanning to each RF of each band supported by the mobile.

The Scanning BCCH **by sets of RF Channel**: this command is used to reduce the scanning to maximum 64 different channel group.

When the BCCH Scanning is activated, the mobile sends first a reply of its configuration. If the BCCH Scanning is not taken into account, the TRACE Mode will be set to **Normal**. If not, the following window is displayed:

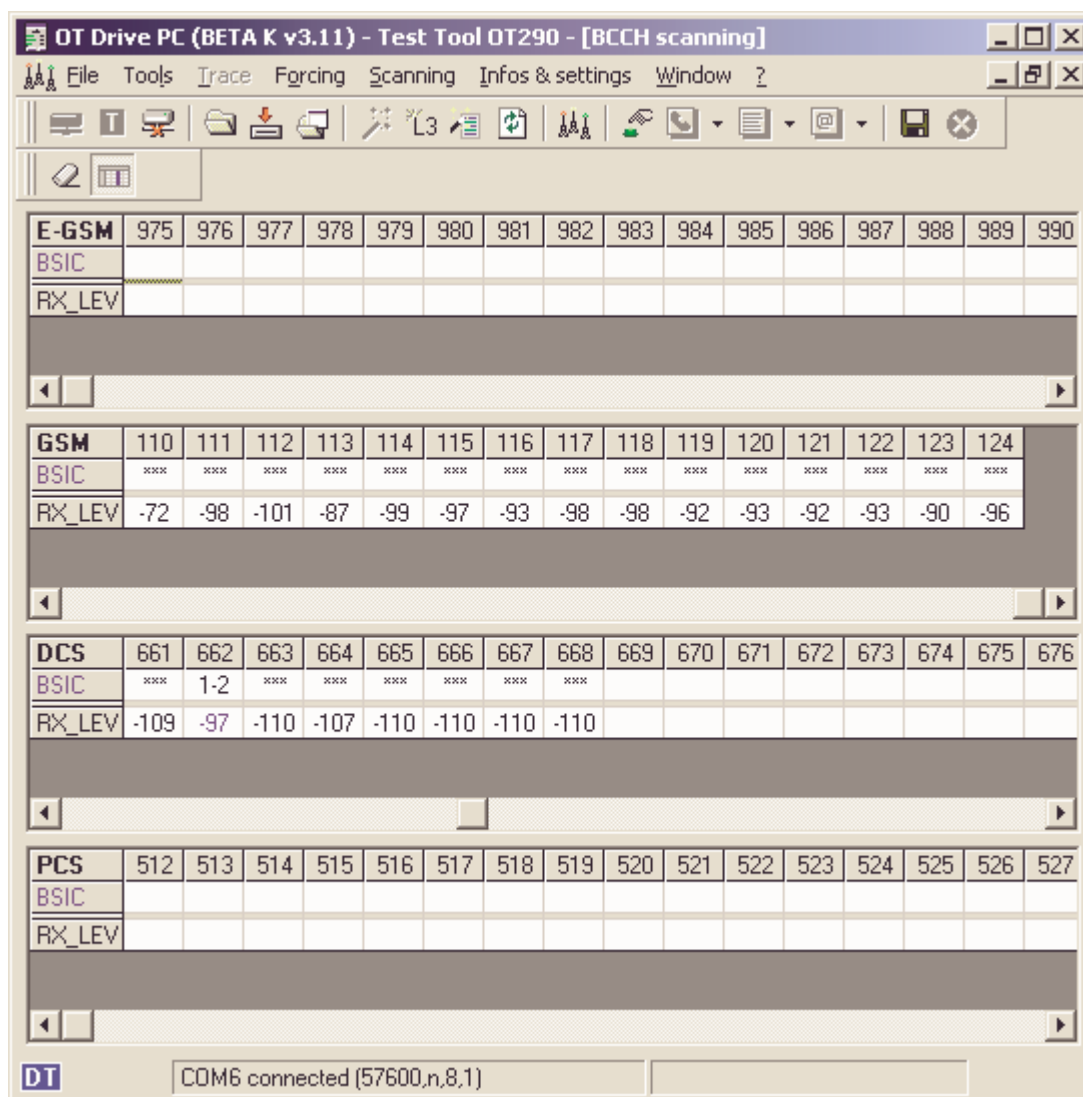

E-GSM	975	976	977	978	979	980	981	982	983	984	985	986	987	988	989	990
BSIC																
RX_LEV																

GSM	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124
BSIC	xxx	xxx	xxx	xxx	xxx	xxx	xxx	xxx	xxx	xxx	xxx	xxx	xxx	xxx	xxx
RX_LEV	-72	-98	-101	-87	-99	-97	-93	-98	-98	-92	-93	-92	-93	-90	-96


DCS	661	662	663	664	665	666	667	668	669	670	671	672	673	674	675	676
BSIC	xxx	1-2	xxx	xxx	xxx	xxx	xxx	xxx								
RX_LEV	-109	-97	-110	-107	-110	-110	-110	-110								

PCS	512	513	514	515	516	517	518	519	520	521	522	523	524	525	526	527
BSIC																
RX_LEV																

DT COM6 connected (57600,n,8,1)

NB: A toolbar button can be checked to focus on current information.

Only scanned channels are displayed in the window, when the scanning mode by sets of RF is chosen.

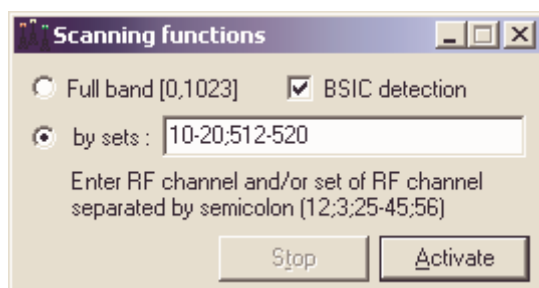

Scanning functions


☐ Full band [0,1023]
 ☒ BSIC detection


☒ by sets :

Enter RF channel and/or set of RF channel separated by semicolon (12;3;25-45;56)

OT Drive PC (BETA K v3.11) - Test Tool OT290 - [BCCH scanning]

File Tools Trace Forcing Scanning Infos & settings Window ?

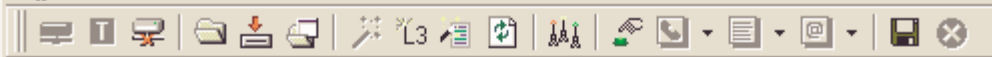




GSM	10	11	12	13	14	15	16	17	18	19	20
BSIC	xxx	0-0	xxx	xxx	xxx	1-2	xxx	xxx	xxx	xxx	1-4
RX_LEV	-102	-93	-98	-78	-98	-100	-93	-105	-100	-96	-84
	-102	-91	-98	-77	-97	-101	-94	-105	-101	-95	-79
	-101	-89	-98	-77	-99	-101	-94	-103	-102	-95	-82
	-103	-88	-91	-78	-98	-100	-95	-107	-101	-99	-81
	-104	-91	-94	-78	-99	-101	-94	-97	-102	-96	-81

DCS	512	513	514	515	516	517	518	519	520
BSIC	xxx	xxx	xxx	xxx	1-4	xxx	xxx	xxx	1-0
RX_LEV	-107	-109	-109	-110	-103	-109	-109	-110	-107
	-107	-107	-107	-110	-102	-110	-110	-110	-107
	-110	-108	-109	-110	-103	-110	-110	-110	-107
	-110	-108	-107	-110	-101	-110	-110	-110	-108

PCS	512	513	514	515	516	517	518	519	520
BSIC									
RX_LEV									


DT COM6 connected (57600,n,8,1)

6. INFORMATION AND SETTINGS

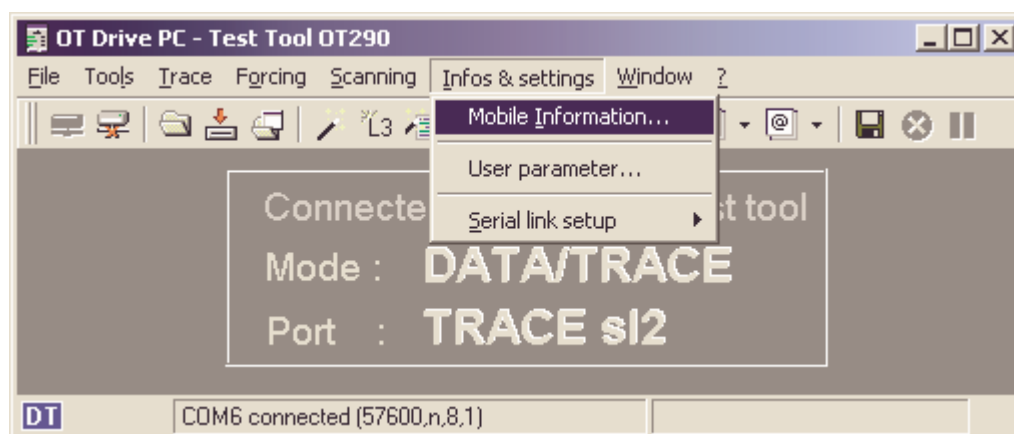

6.1 MOBILE INFORMATION


This menu is used to show mobile's Identification. Following information are displayed:

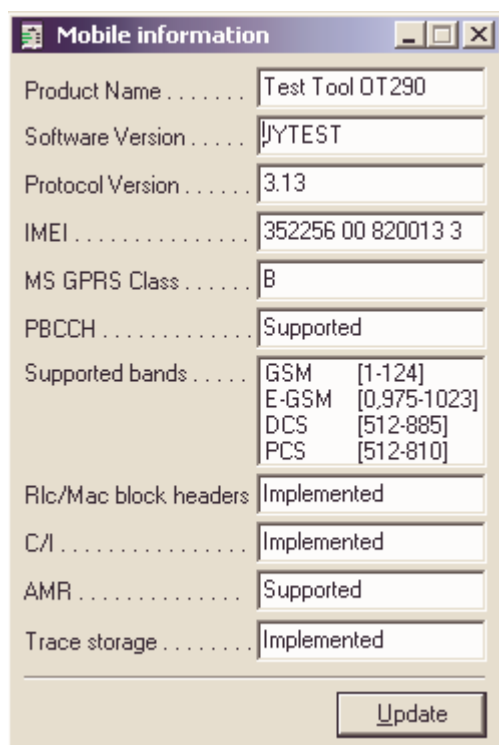

- **MS GPRS Class** Information is **only available if OT support GPRS**
 - Class B GPRS Mobile Station
 - Class C GPRS Mobile Station
- **PBCCH** information indicates if the OT supports the PBCCH channel
- **Band supported:** lists the band on which the OT operates.
- **RLC/Mac Block header** indicates if this functionality is implemented in the OT.
- **C/I** indicates if C/I trace is implemented in software
- **AMR** indicates if mobile support AMR
- **Trace storage** indicates if mobile have trace storage capability

6.2 USER PARAMETER

This interface is used to store in mobile different frequency set for scanning storage functionality.

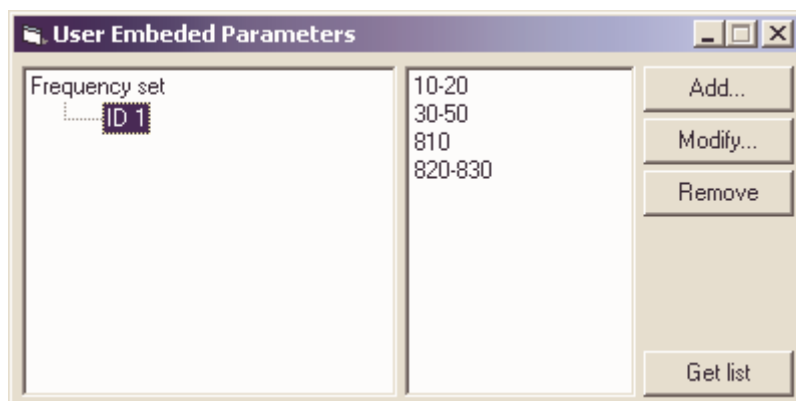


6.3 SERIAL LINK SETUP

This menu is used to switch the mobile mode (for example from data to trace.)

7. WINDOW

This menu regroups all items to manage OT Drive PC windows.

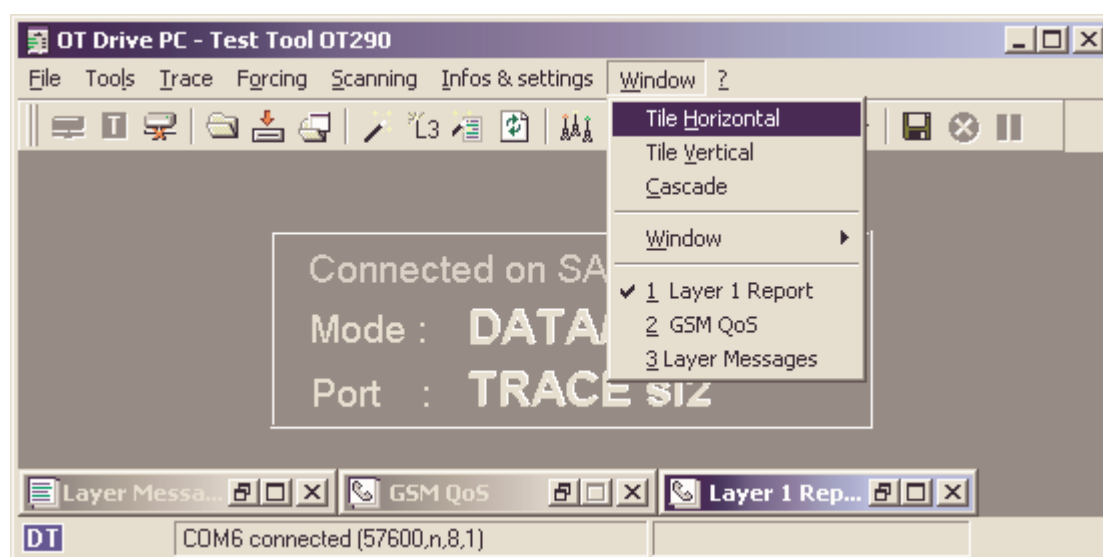

8. “?” MENU

8.1 HELP

This menu activates the visualisation of the user manual in PDF format. (Acrobat Reader V4.0 is necessary)

8.2 ABOUT...

This menu gives information about the version of the software and which version of serial link protocol is implemented.